

Gigabit Network HDD SATA

User Manual



Ver. 1.3

CONTENTS

Introduction	1
Key Features	1
System Requirements	1
Parts Name and Functions.....	2
Parts Name and Functions.....	2
LED Definition	2
Assemble of the Hard Disk Drive.....	3
Connection and Removing Connection.....	4
Network Connection.....	4
USB Printer & Mass Storage Device Connection	4
Removing Connection	5
Setup of This Device.....	6
Login	6
Basic.....	6
Control Panel.....	13
Personal Infomation.....	26
Logout	27
Mapping a Folder in Windows XP	28
Printer Setup.....	31
Mounting SMB Server in Mac OS X.....	34
Mounting SMB Server in Linux	38
Network Applications	40
Personal Data Backup	40
Network File Sharing.....	40
FTP Server	40
Printer Server	41
USB Mass Storage Device.....	41
Trouble Shooting	43

Introduction

Thank you for purchasing this device. It is a flexible, economical and powerful solution for your network storage application. The following instructions will help you to learn more about the connections, set-ups, and configurations of it.

Key Features


- External 3.5" hard drive with ethernet interface
- Share music, pictures, movies and data over network
- Share files over LAN as SAMBA file server
- Share files over Internet as FTP server
- Features a USB printer server function
- Expansion of capacity with USB Mass Storage Devices
- Web-based configuration with password protection
- Works with Static IP, DHCP client, or DHCP server
- Easy firmware upgrade
- Hardware Reset key
- Support 3.5" SATA hard disk up to 750GB
- Support UPnP
- Interface: 10/100/1000 Base-TX(Auto MDI/MDI-X), supports auto crossover detection
- Aluminum enclosure with an internal cooling fan for continuous operation

System Requirements

- A PC with Ethernet port
- Windows Vista, Windows XP, or Windows 2000; Mac OS X v10.2.1 or above; Linux

Parts Name and Functions

Parts Name and Functions

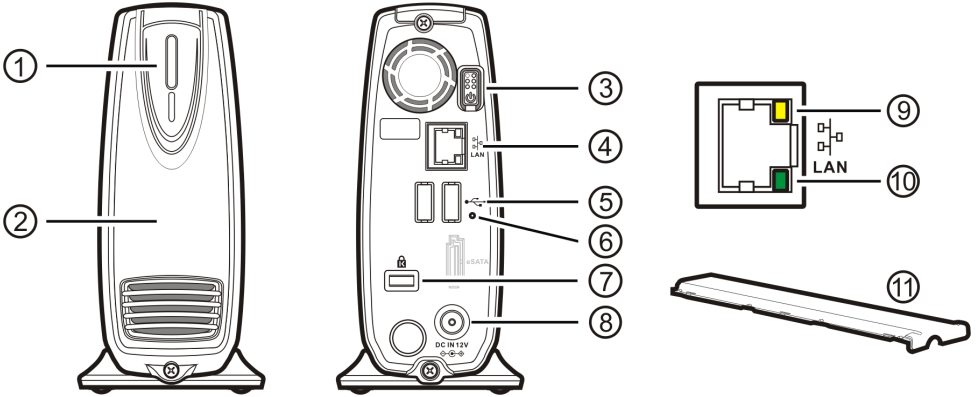

Parts Name and Functions

- ① **Power LED:** Power and access (blue) / Booting-up or reset(orange)
- ② **Front cover:** Covers the opening of the housing
- ③ **Power button:** Push to turn on or off this device
- ④ **Ethernet port:** Connects to the Ethernet cable with RJ45 connector
- ⑤ **USB host ports:** Connects to USB printers and USB Mass Storage Devices
- ⑥ **Reset key:** Press 5 sec to restore factory default
- ⑦ **Kensington Security Slot:** Connects to a Kensington lock pin
- ⑧ **DC In jack:** Connects to the AC adapter
- ⑨ **Activity LED (yellow):** Activity status of Ethernet
- ⑩ **Link LED (green):** Link status of Ethernet
- ⑪ **Plastic Upper Frame:** Covers the groove and screws on the top of this device


LED Definition

LED Name	Operating Status	LED Color
Power LED	Booting up	Orange
	Power ON	Blue
	NAS Accessing	Blinking in blue
	Resetting	Orange
Link LED	Linked to the Ethernet	Green
	Disconnected from the Ethernet	No signal
Activity LED	Accessing the Ethernet	Orange
	Not Accessing	No signal

Assemble of the Hard Disk Drive



If you purchased this device with a hard disk drive preassembled, please do not disassemble the device by yourself. Disassembling will void warranty!

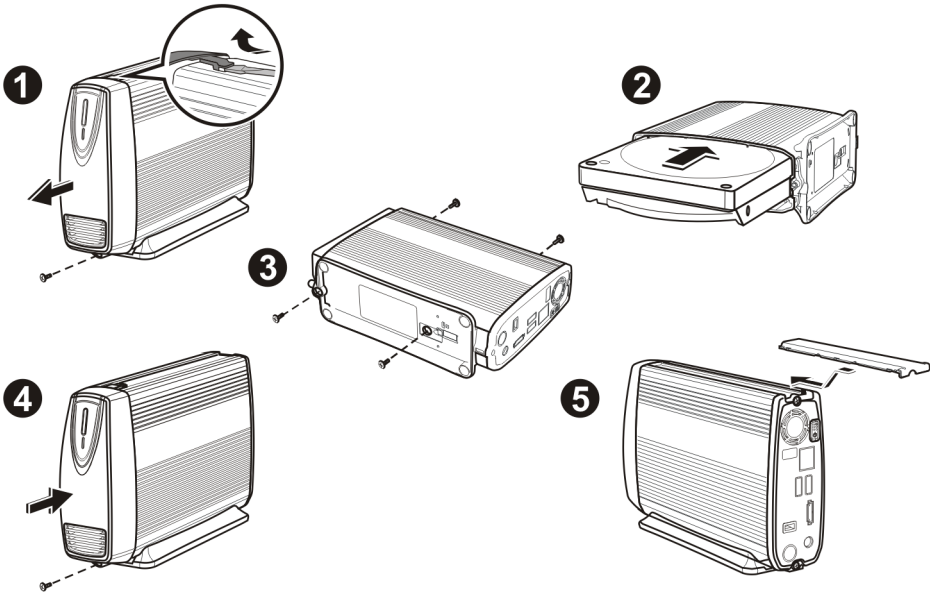

1. Unfasten the screw on the lower part of the front cover. Remove the front cover by lifting the clip with a flat screw driver.
2. Place the device horizontally; align the hard disk drive with the PCB board. Push slowly and gently to the most inside until the hard disk drive is firmly seated.
3. Assemble the enclosure by fastening the screws on both top and bottom sides.
4. Attach the front cover to the case and secure the screw on the lower part.
5. Restore the plastic upper frame by sliding it into the gape on the top of the case. Make sure the plastic upper frame matches the direction.




For a newly attached HDD, formatting it with the user interface of this device is required before any further operation. (see page 22)

Connection and Removing connection

Connection and Removing Connection

Network Connection

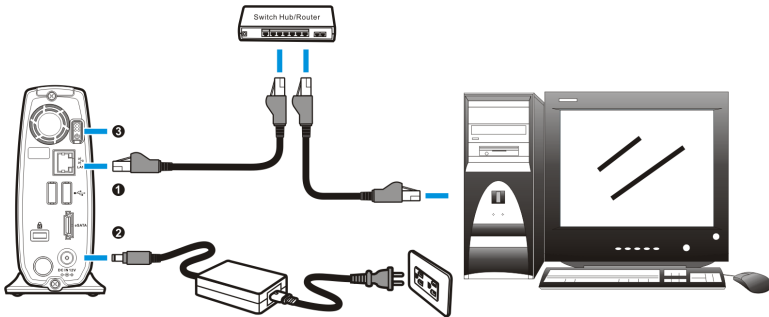


❶: Connect this device and a Switch, Hub, Router, or a computer with a RJ45 Ethernet cable.

❷: Connect the power supply to this device.

❸: Press the "Power button" to turn on this device. The orange LED on the front cover will light up during booting-up. This device will be ready to use when the blue LED lights up steadily.

USB Printer & Mass Storage Device Connection

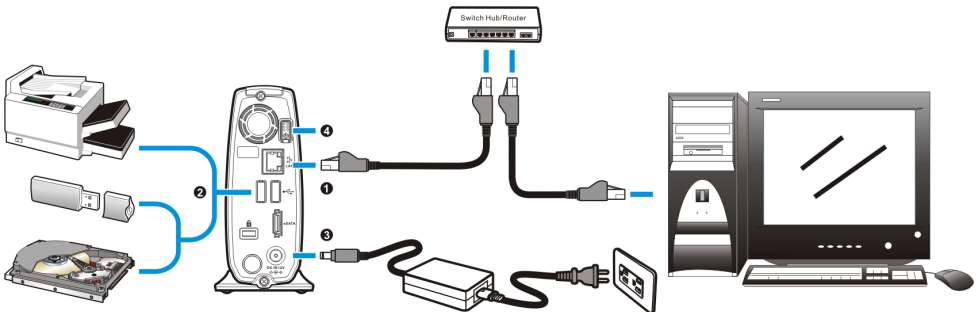

❶: Connect this device and a Switch, Hub, Router, or computer with a RJ45 Ethernet cable.

❷: Connect USB printer(s) or USB mass storage device(s) to this device with USB cable(s). This device can automatically mount the USB devices connected. (page 28, 41) You may need to connect the power adapter of the USB HDD in order to operate properly.

❸: Connect the power supply to this device.

❹: Press the "Power button" to turn on this device. The orange LED on the front cover will light up during booting-up. This device will be ready to use when the blue LED lights up steadily.

Removing Connection

Removing USB Mass Storage Devices

This device will auto-mount a USB Mass Storage Device connected to it. But you need to manually unmount the USB Mass Storage Device before disconnecting it. You can unmount a USB drive by **Control Panel > Maintenance > Disk Utility > clicking "Unmount" button** (page 22).

Removing USB Printer

You have to unmount the printer before disconnecting it. You can unmount a USB printer by **Control Panel > File and Print > Printer Server > Unchecking "Enable" box.** (page 17)

Removing Power connection

Press the "Power button" to turn off the device, and then remove its connections.



It is essential that the device need to be turned off prior to the removal the power connection, or else your data could be damaged.

Setup of This Device

Setup of This Device

Login

You need to login to get setup access of this device. Key in the IP address assigned to this device in the URL bar of a browser if a DHCP server is present; key in "192.168.2.1" either a DHCP server is absent or this device is directly connected to your computer.

Login as username "admin" to perform settings. Default password for username "admin" is "admin". You can change the password in **Personal Information > Account** (page 27)



Username	<input type="text" value="admin"/>
Password	<input type="password" value="admin"/>
	<input type="button" value="Login"/>


Basic

Quick Setup


Wizard

To setup basic configurations of this device, follow the diagram below.


1. Language Setting. Specify the language of this GUI.

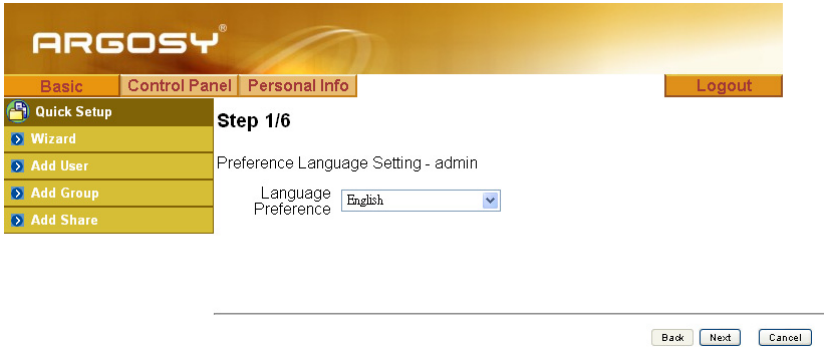

2. Password Setting. Click "Next" to skip password change.

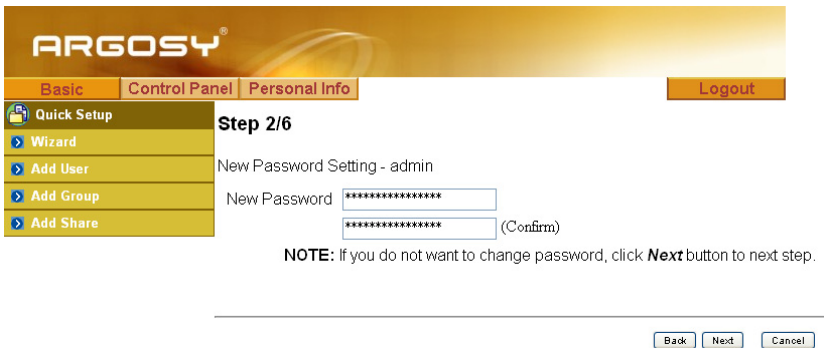

3. Hostname Setting. This hostname can be seen in My Neighborhood. (default **arinas**)

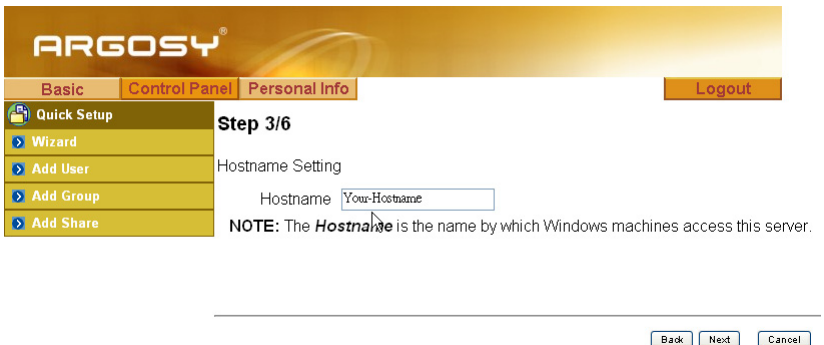

4. Internet Protocol Setting. You may specify a stationary IP address/DNS server address or enable the "Obtain IP address/DNS server address automatically" checkbox, depending on your LAN configuration.

Setup of This Device

The screenshot shows the ARGOSY Quick Setup Wizard at Step 4/6, titled "Internet Protocol Setting". The interface includes a navigation menu on the left with options: Quick Setup, Wizard, Add User, Add Group, and Add Share. The main content area has three tabs: Basic, Control Panel, and Personal Info, with "Personal Info" selected. A "Logout" button is in the top right. The settings are as follows:

- IP Address:** Obtain IP Address automatically; Use following IP Address.
 - IP Address: 192 . 168 . 2 . 1
 - Subnet Mask: 255 . 255 . 255 . 0
 - Default Gateway: 192 . 168 . 2 . 254
- DNS Server:** Obtain DNS Server Address automatically; Use following DNS Server Address.
 - Primary: 192 . 168 . 2 . 254
 - Secondary: [] . [] . [] . []
 - Others: [] . [] . [] . []

At the bottom right, there are "Back", "Next", and "Cancel" buttons.

5. Time Setting. Adjust date, time, and time zone of your local position. Or select a NTP(Network Time Protocol) server for automatic time setting and calibration.

The screenshot shows the ARGOSY Quick Setup Wizard at Step 5/6, titled "Time Settings". The interface is similar to the previous step, with the "Personal Info" tab selected. The settings are as follows:

- Date:** Mon 9, Date 7, Year 2007
- Time:** Hour 11, Min 4, AM
- Time Zone:** (GMT+08:00) Taipei
- NTP Server:** Default: Not Use; User Define: []

At the bottom right, there are "Back", "Next", and "Cancel" buttons.

6. Wizard Setting Confirmation. Click complete to implement above settings.

	Current Settings	New Settings
UI Language	English	English
Hostname	Your-Hostname	Your-Hostname
IP Address	Use Following Address	Use Following Address
	IP Address 192.168.2.1	IP Address 192.168.2.1
	Subnet Mask 255.255.255.0	Subnet Mask 255.255.255.0
	Default Gateway 192.168.2.254	Default Gateway 192.168.2.254
DNS Server	Use Following Address	Use Following Address
	Primary 192.168.2.254	Primary 192.168.2.254
	Secondary	Secondary
	Others	Others
Date and Time	9/ 7/2007 11:36 AM	9/ 7/2007 11:36 AM
Time Zone	Taipei	Taipei
NTP Server	none	none

Add User

To add user support, select the Add User chapter for setting. Please refer to Users and Groups chapter for more detail.

1. Add User. Setup user name and password. Check **"Create Private Folder"** box for creating a home directory of this user.

Step 1/3 Add User

User Name

Password

(Confirm)

Description (optional)

Create Private Folder (Share)

Private Folder (Share) Location:


Enable Quota of MB

2. User Manageship. Add/remove this user to/from an existing group.

Setup of This Device



3. Share Permission. Set user permission of each shared directory. Select a share name from the "No Access" column and click **Read Only** or **Writable** to allow user access right. Select a share name from the "Allowed" column and click **Remove** to disable user access right from this directory.

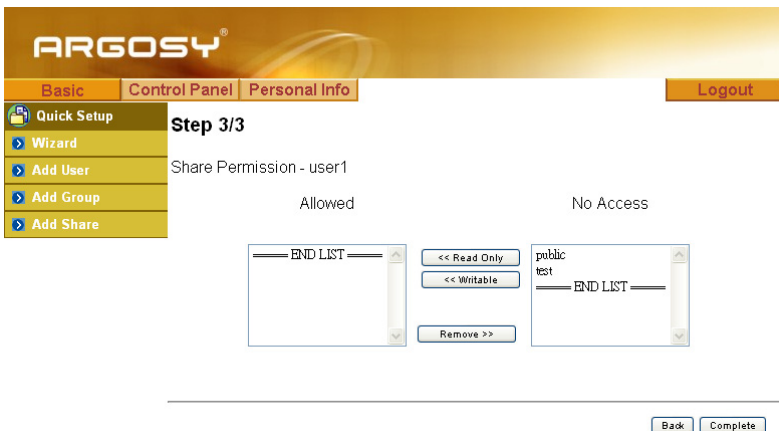


Add Group

To add group support, select the Add Group chapter for setting. Please refer to Users and Groups chapter for more detail.

1. Add Group. Set up group name.




2. Group Members. Set up group members. Select a user from the "No Members" column and click "**Add**" to categorize it into this group. Select a user from the "Members" column and click "**Remove**" to remove this user from this group.

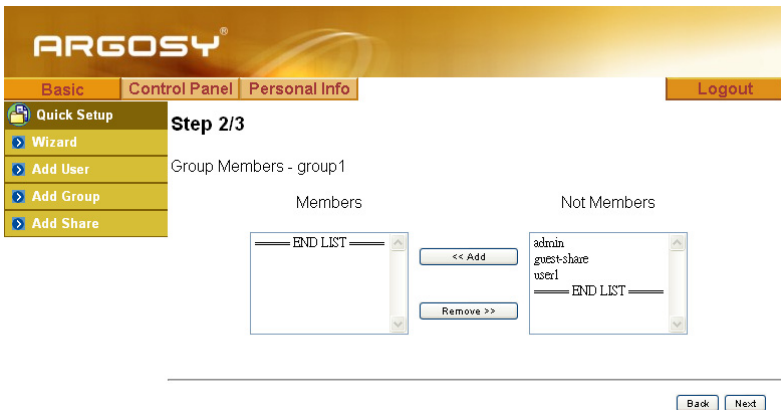

3. Share Permission. Set group permission of each shared directory. Select a share name from the "No Access" column and click "**Read Only**" or "**Writable**" to allow group access right. Select a share name from the "Allowed" column and click "**Remove**" to disable group access right from this directory.

Setup of This Device

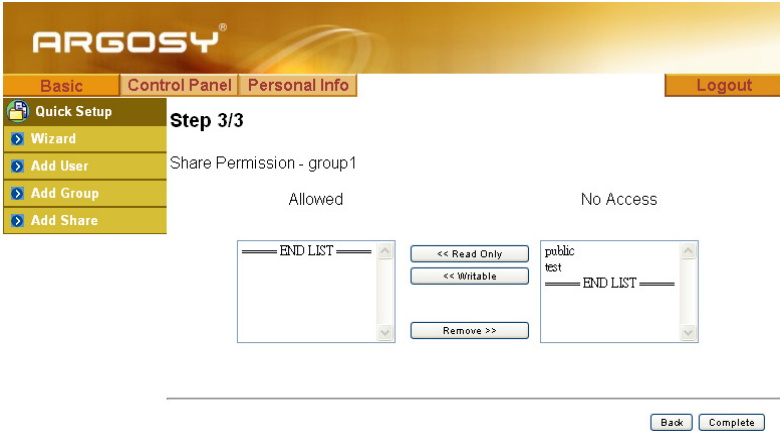


Add Share

To add a sharing directory, select the Add Share chapter for setting. Please refer to Share Management chapter for more detail.


1. Add Share. Set up the directory name.



2. Windows, FTP access. Set user/group permission of this directory in Microsoft Network and FTP environment. Select a share name from the "No Access" column and click "**Read Only**" or "**Writable**" to allow user/group access right. Select a share name from the "Allowed" column and click "**Remove**" to disable user/group access right from this directory. Check the box "**Allow for all**" will enable writable permission of this directory to all users/groups.

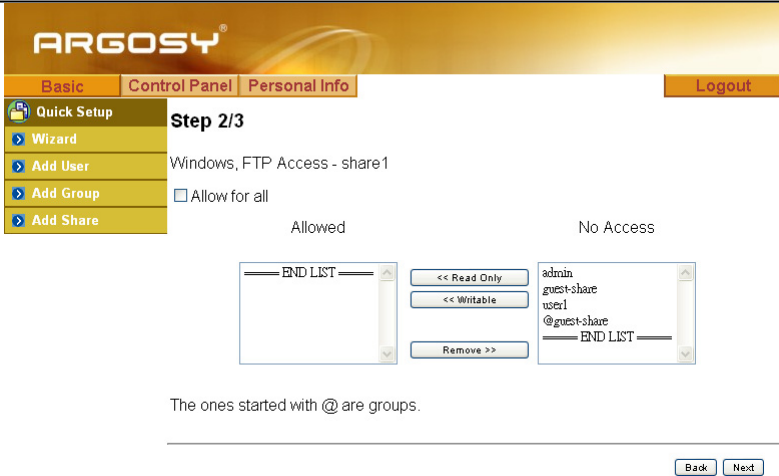

3. NFS Access. Set IP access permissions of this shared directory in Unix-like environment. Input IP Address and click **"Add"** to add this IP to the allowed list. Input Subnet (the start of allowed IP address before the slash; the end of allowed IP address after the slash) and click **Add** to add this subnet section to the allowed list. Check **"Allow to All"** box to enable NFS access of this directory to all users.

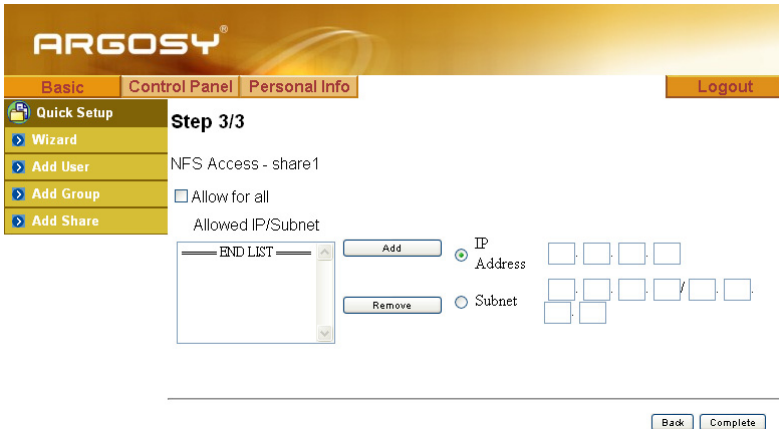

Control Panel

Users and Groups

User Management

All existing users in this system will be shown in this menu. You can create a new user by filling out the form and clicking the **"Save"** button. Select an existing user and click **"Delete User"** button to delete an existing user. Select an existing user and click **"Groups"** button to

Setup of This Device

enter Group Management menu. Check “**Create Private Folder**” box for creating a home directory of this user.

The screenshot shows the ARGOSY web interface. The top navigation bar includes 'Basic', 'Control Panel', 'Personal Info', and 'Logout'. The left sidebar lists 'Users and Groups', 'User Management', 'Group Management', 'File and Print', 'System', 'Network Service', 'Maintenance', and 'Log File'. The main content area is titled 'User Management' and contains a scrollable list of 'Existing Users' with 'admin', 'guest-share', and 'user1' visible. Below the list are input fields for 'User Name', 'Password', and '(Confirm)', a 'Description (optional)' field, and checkboxes for 'Create Private Folder (Share)' and 'Enable Quota of [] MB'. The 'Private Folder (Share) Location' is set to '/mnt/usb4'. At the bottom are buttons for 'Save', 'Clear Form', 'Groups', and 'Delete User'.

Group Management

All existing groups in this system will be shown in this menu. You can create a new group by filling out the form and clicking the “**Save**” button. Select an existing group and click “**Delete Group**” button to delete an existing group. You can also add or remove users from an existing group by selecting a group name and clicking the “**Members**” button.

The screenshot shows the ARGOSY web interface for Group Management. The top navigation bar includes 'Basic', 'Control Panel', 'Personal Info', and 'Logout'. The left sidebar lists 'Users and Groups', 'User Management', 'Group Management', 'File and Print', 'System', 'Network Service', 'Maintenance', and 'Log File'. The main content area is titled 'Group Management' and contains a scrollable list of 'Existing Groups' with 'group1' and 'guest-share' visible. Below the list is a 'Group Name' input field and buttons for 'Save', 'Clear Form', 'Members', and 'Delete Group'.

File and Print

File Server

Character Set

Select your preferred character set.

Windows Setting

- Check “**Enable**” box to enable Microsoft Network connection
- Set Workgroup name for Microsoft Clients to access. You can find this Workgroup name in My Network Places.
- Set Description name for Microsoft Clients to access. You can find this Description name in **My Network Places/Entire Network/Microsoft Windows Network/“Workgroup name”/**.
- Define Windows Internet Server Name IP address if necessary.

FTP Server Setting

Check “**Enable**” box to enable FTP server function, with default port 21.

NFS Server Setting

Check “**Enable**” box to enable NFS server function.

Guest Access Setting

Check “**Enable**” box to allow users using guest-share directory.

The screenshot shows the ARGOSY control panel interface. The top navigation bar includes 'Basic', 'Control Panel', 'Personal Info', and 'Logout'. A sidebar on the left lists various system management options: 'Users and Groups', 'File and Print', 'File Server', 'Share Management', 'Printer Server', 'System', 'Network Service', 'Maintenance', and 'Log File'. The main content area is titled 'File Server Setting' and contains the following configuration options:

- File Server Setting**
 - Character set: English(CP437)
 - Windows Setting
 - Enable:
 - Workgroup: WORKGROUP
 - Description: MYNAS
 - WINS Server (Optional): [] [] [] []
 - FTP Server Setting
 - Enable:
 - Port Number: 21
 - NFS Server Setting
 - Enable:
 - Guest Access Setting
 - Enable:
 - Enable Quota:
 - Guest-user Quota: [] MB

A 'Save' button is located at the bottom right of the settings area.

Share Management

Creating Share

Fill out the “**Share Name**” box, and then click the “**Save**” button to create a new share name.


Setup of This Device

Property Change

You can modify properties of an existing share name. Select a share name in the "Existing Share" column and click "Windows, FTP Access" or "NFS Access" button to set or remove read/write permissions of the selected directory.

Delete Share

Check "Delete Share" to delete a specified share name.

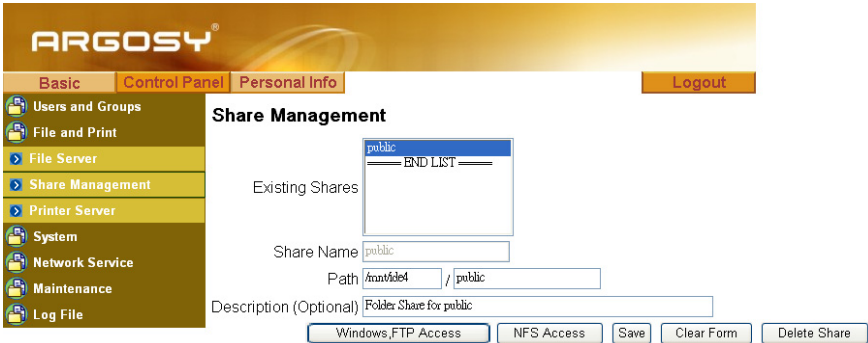

Windows and FTP Access


Select a share name from the "No Access" column and click "Read Only" or "Writable" to allow user/group access right. Select a share name from the "Allowed" column and click "Remove" to disable user/group access right from this directory. Check the box "Allow for all" will enable writable permission of this directory to all users/groups.



NFS Access

Set IP access permissions of this shared directory in Unix-like environment. Input IP


Address and click **"Add"** to add this IP to the allowed list. Input Subnet (the start of allowed IP address before the slash; the end of allowed IP address after the slash) and click **Add** to add this subnet section to the allowed list. Check **"Allow to All"** box to enable NFS access of this directory to all users.

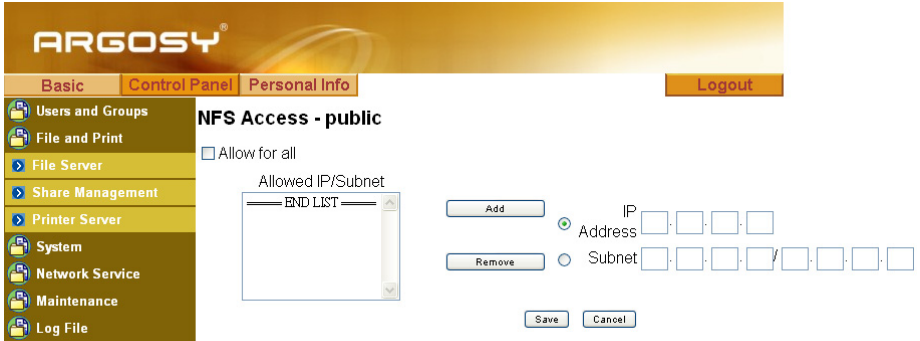

Printer Server


Check **"Enable"** box to enable Printer Server function.

Uncheck **"Enable"** box to unmount a mounted printer.

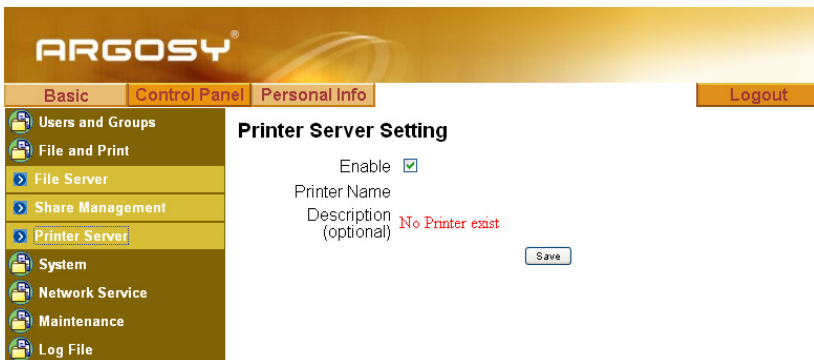

This device detects the connection of a USB printer automatically. Information of the printer will be shown in the description. **Note:** You have to unmount the printer before disconnecting it.

Setup of This Device

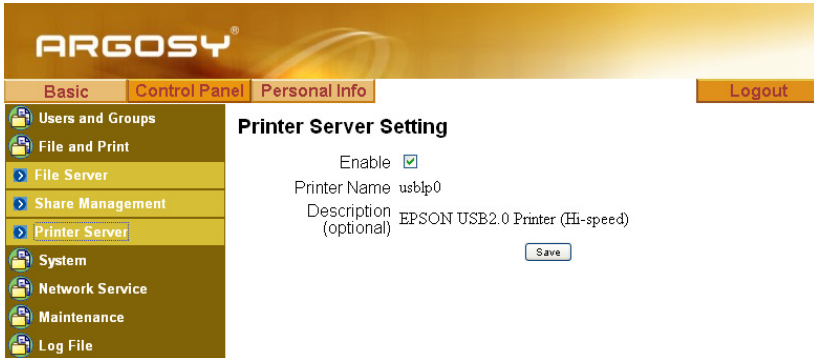

System

LAN Settings

Hostname:

Assign a name to this device as the identification within your local area network.

(default **arinas**)

IP Address Setting:

- Obtain IP Address Automatically

This device obtains an IP address automatically if a DHCP server is present in the local area network.

- Use Following IP Address

Fill in the IP address, subnet mask, and Default gateway information if they are assigned by your network administrator.

- Obtain DNS Server Address Automatically

This device obtains a DNS Server address automatically if a DHCP server is present in the local area network.

- Use Following DNS Server Address

Fill in the DNS server addresses if they are assigned by your network administrator.

ARGOSY

Basic | **Control Panel** | Personal Info | Logout

Users and Groups
File and Print
System
LAN Settings
Time Settings
Turn Off Server
Information
Disk Usage
Error Notification
Network Service
Maintenance
Log File

LAN Settings

Hostname

IP Address Setting Obtain IP Address automatically
 Use following IP Address

IP Address	192	.168	.2	1
Subnet Mask	255	.255	.255	0
Default Gateway	192	.168	.2	254

Obtain DNS Server Address automatically
 Use following DNS Server Address

Primary	192	.168	.2	1
Secondary				
Others				

MAC Address 00:50:C2:11:11:11

Time Settings

Set current Date, Time, and Time zone.

Specify a NTP Server if you want to get date and time from Time Server.

ARGOSY

Basic | **Control Panel** | Personal Info | Logout

Users and Groups
File and Print
System
LAN Settings
Time Settings
Turn Off Server
Information
Disk Usage
Error Notification
Network Service
Maintenance
Log File

Time Settings

Date Mon Date Year

Time Hour Min

Time Zone

NTP Server Default
 User Define

Turn Off Server

To restart this server, click the **"Restart"** button.

To power off this server, click the **"Shutdown"** button.


Information

Display system information.

Disk Usage

Display HDD usage (total disk size, used disk size) and user's quota information.

Setup of This Device

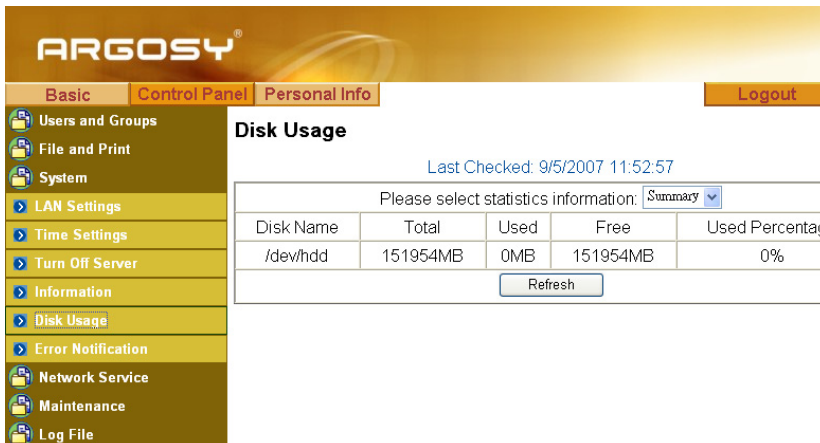

The screenshot shows the ARGOSY Control Panel interface. The top navigation bar includes 'Basic', 'Control Panel', 'Personal Info', and 'Logout'. A left sidebar contains various system settings categories, with 'Disk Usage' highlighted. The main content area displays 'Disk Usage' information, including a 'Last Checked' timestamp and a table of disk statistics. A 'Refresh' button is located below the table.

ARGOSY

Basic Control Panel Personal Info Logout

Users and Groups
File and Print
System
LAN Settings
Time Settings
Turn Off Server
Information
Disk Usage
Error Notification
Network Service
Maintenance
Log File

Disk Usage

Last Checked: 9/5/2007 11:52:57

Please select statistics information: Summary

Disk Name	Total	Used	Free	Used Percentage
/dev/hdd	151954MB	0MB	151954MB	0%

Refresh

Error Notification

Monitoring Service Setting

- Disk Usage
If the disk usage reaches 90%, the system will inform the administrator.
- Windows File Sharing Server
If the SAMBA task goes wrong, the system will inform the administrator.
- FTP Server
If the FTP Server task goes wrong, the system will inform the administrator.
- DHCP Server
If the DHCP Server task goes wrong, the system will inform the administrator.

Check Interval

You can select hourly or daily inform interval.

Email Notification Setting

- Enable
Check this box to enable notification via email.
- Error Handling Mail Server
Specify a SMTP server for this device.
- Error Handling Email Address
Specify administrator email address.

ARGOSY

Basic | **Control Panel** | Personal Info | Logout

- Users and Groups
- File and Print
- System
 - LAN Settings
 - Time Settings
 - Turn Off Server
 - Information
 - Disk Usage
 - Error Notification**
- Network Service
- Maintenance
- Log File

Error Notification Setting

Monitoring Services Setting

- Disk Usage
- Windows File Sharing Server
- FTP Server
- DHCP Server

Check Interval

Interval:

Email Notification Setting

Enable

Error Handling Mail Server

Error Handling Email Addresses

Pop-up Notification Setting

- Enable

Check this box to enable notification via Windows pop-up messages.

- Error Handling Pop-up Machines

Specify the IP address of administrator's PC.

ARGOSY

Basic | **Control Panel** | Personal Info | Logout

- Users and Groups
- File and Print
- System
 - LAN Settings
 - Time Settings
 - Turn Off Server
 - Information
 - Disk Usage
 - Error Notification**
- Network Service
- Maintenance
- Log File

Pop-Up Notification Setting

Enable

Error Handling Pop-Up Machines

Network Service

DHCP Server

If there is no DHCP server present, this device will automatically turn on its DHCP server

Setup of This Device

function, and take 192.168.2.1 as default IP address.

The screenshot shows the ARGOSY web interface for DHCP Server Setting. The top navigation bar includes 'Basic', 'Control Panel', 'Personal Info', and 'Logout'. A left sidebar menu lists 'Users and Groups', 'File and Print', 'System', 'Network Service', 'DHCP Server' (selected), 'Maintenance', and 'Log File'. The main content area is titled 'DHCP Server Setting' and includes an 'Enable Server' checkbox. Below this is the 'DHCP Client Setting' section with the following fields: Subnet Mask (optional), Default Gateway (optional), Primary DNS (optional) set to 192.168.2.1, Secondary DNS (optional), Others DNS (optional), DHCP IP Address Start set to 192.168.2.2, DHCP IP Address End set to 192.168.2.50, and Maximum Lease Time set to 1 day. At the bottom are three buttons: 'Save', 'DHCP lease list', and 'Static IP'.

Maintenance

Disk Utility

Disk Utility shows device name, type of file system, volume mounted, and disk mount status of the HDD installed in this device.

For a newly attached HDD, formatting is required before any further operation.

- Format Button

Press this button to format a specific HDD. It supports EXT3, and FAT32 file system.

- Scan Button

Press this button to check disk integrity.

- Unmount button

This device will automatically mount a USB Mass Storage Device connected to it. But you need to manually unmount the USB Mass Storage Device before disconnecting it.

- Detail Button

If the HDD supports S.M.A.R.T, it will report its health status.

- Disk Spin Down Time

Specify the HDD spin down time if there is no access to this device for some while.

The screenshot shows the ARGOSY web interface. At the top, there are navigation tabs: Basic, Control Panel, Personal Info, and Logout. A left sidebar contains a menu with items: Users and Groups, File and Print, System, Network Service, Maintenance, Disk Utility (highlighted), Firmware Upgrade, Save Configuration, Restore Configuration, Factory Reset, and Log File. The main content area is titled "Disk Utility" and contains a table with the following data:

Device Name	Type	Mount Point	Status	Format Type	Scandisk	Umount	Health
/dev/hdd	vfat	/mnt/ide4	mounted	ext3 <input type="button" value="Format"/>	<input type="button" value="Scan"/>	<input type="button" value="Umount"/>	PASSED <input type="button" value="Detail"/>

Below the table is a "Refresh" button. At the bottom of the interface, there is a "Disk spin down time" field with a "Minute" label and a "Save" button.

Firmware Upgrade


You can perform firmware upgrade with this function by selecting a firmware upgrade file and then clicking the "Start Upgrade" button. When the upgrade is in progress, all network connection will be stopped. This device will automatically reboot after the upgrade is completed.

The screenshot shows the ARGOSY web interface with the "Firmware Upgrade" section selected in the sidebar. The main content area displays "Current Firmware Version" as 2.6.0-n. Below this is an "Upgrade File" input field with a "Browse..." button. At the bottom of the section is a "Start Upgrade" button.

Save Configuration


This device can save its current configuration to a local file. The default file name is "config.tar".

Setup of This Device

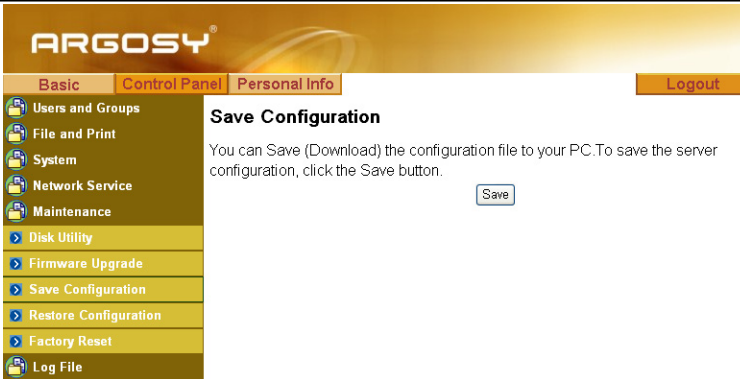

Restore Configuration

You can restore system configuration from a previously saved config file saved by "Save Configuration" function. Specify a config file and then click the "Restore" button to restore previous settings.

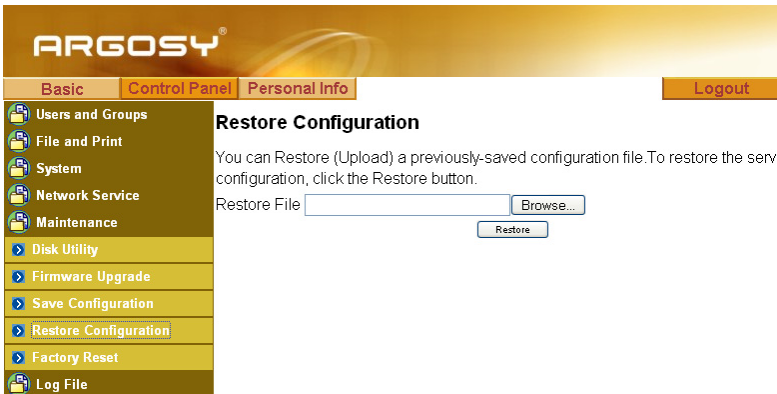

Factory Reset

"Factory Reset" resets all configurations to factory defaults. All users, networking, and other configurations will be lost once the "Factory Reset" button is pressed.

ARGOSY

Basic | **Control Panel** | Personal Info | Logout

- Users and Groups
- File and Print
- System
- Network Service
- Maintenance
- Disk Utility
- Firmware Upgrade
- Save Configuration
- Restore Configuration
- Factory Reset**
- Log File

Factory Reset

To restore the factory default settings, click the Factory Reset button.
Caution!! You will lose all user data.

Log File

Samba Log

ARGOSY

Basic | **Control Panel** | Personal Info | Logout

- Users and Groups
- File and Print
- System
- Network Service
- Maintenance
- Log File
- Samba Log**
- FTP Log
- DHCP Server Log
- System Log
- Administration Log

Samba Log

UserFrom	Time	Information
	[2000/01/08 09:55:04, 0]	smbd version 3.0.20 started.
	[2000/01/08 09:55:07, 0]	smbd version 3.0.20 started.
	[2000/01/08 09:55:10, 0]	smbd version 3.0.20 started.
	[2000/01/08 17:55:34, 0]	smbd version 3.0.20 started.
	[2000/01/08 17:55:37, 0]	smbd version 3.0.20 started.
	[2000/01/08 18:00:35, 0]	smbd version 3.0.20 started.

FTP Log

ARGOSY

Basic | **Control Panel** | Personal Info | Logout


- Users and Groups
- File and Print
- System
- Network Service
- Maintenance
- Log File
- FTP Log**
- DHCP Server Log
- System Log
- Administration Log

FTP Log

Time	IP	Message
------	----	---------


DHCP Log

Setup of This Device

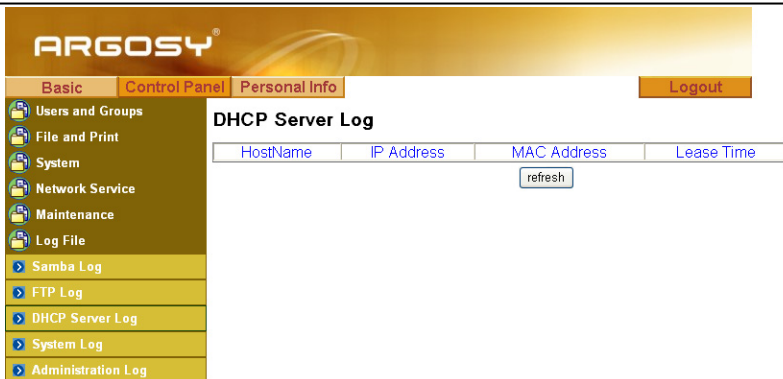

The screenshot shows the ARGOSY web interface with the 'Control Panel' tab selected. The left sidebar contains a tree view of system logs, with 'DHCP Server Log' selected. The main content area displays the 'DHCP Server Log' table with columns for HostName, IP Address, MAC Address, and Lease Time. A 'refresh' button is located below the table.


System Log

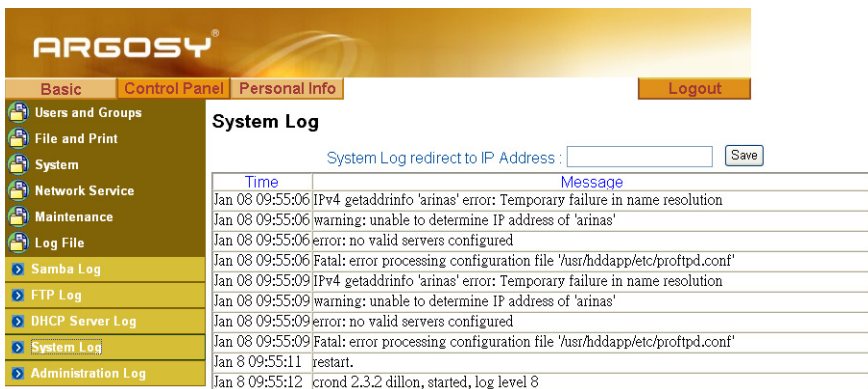

The screenshot shows the ARGOSY web interface with the 'Control Panel' tab selected. The left sidebar contains a tree view of system logs, with 'System Log' selected. The main content area displays the 'System Log' table with columns for Time and Message. Above the table is a search field labeled 'System Log redirect to IP Address:' with a 'Save' button.

Time	Message
Jan 08 09:55:06	IPv4 getaddrinfo 'arinas' error: Temporary failure in name resolution
Jan 08 09:55:06	warning: unable to determine IP address of 'arinas'
Jan 08 09:55:06	error: no valid servers configured
Jan 08 09:55:06	Fatal: error processing configuration file /usr/hddapp/etc/proftpd.conf'
Jan 08 09:55:09	IPv4 getaddrinfo 'arinas' error: Temporary failure in name resolution
Jan 08 09:55:09	warning: unable to determine IP address of 'arinas'
Jan 08 09:55:09	error: no valid servers configured
Jan 08 09:55:09	Fatal: error processing configuration file /usr/hddapp/etc/proftpd.conf'
Jan 8 09:55:11	restart.
Jan 8 09:55:12	crond 2.3.2 dillon, started, log level 8

Administration Log

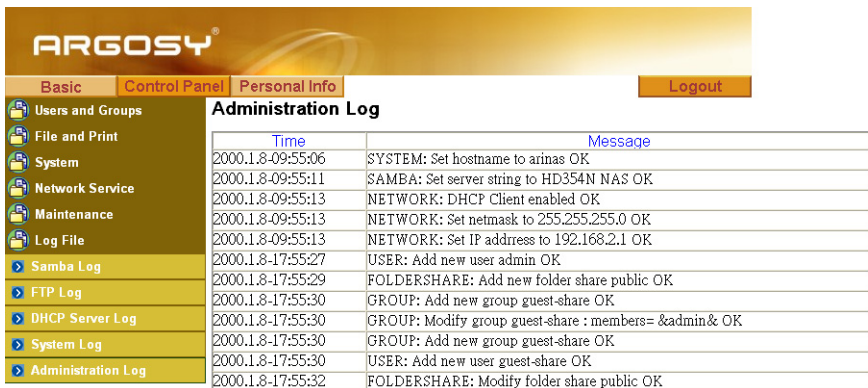

The screenshot shows the ARGOSY web interface with the 'Control Panel' tab selected. The left sidebar contains a tree view of system logs, with 'Administration Log' selected. The main content area displays the 'Administration Log' table with columns for Time and Message.

Time	Message
2000.1.8-09:55:06	SYSTEM: Set hostname to arinas OK
2000.1.8-09:55:11	SAMBA: Set server string to HD354N NAS OK
2000.1.8-09:55:13	NETWORK: DHCP Client enabled OK
2000.1.8-09:55:13	NETWORK: Set netmask to 255.255.255.0 OK
2000.1.8-09:55:13	NETWORK: Set IP address to 192.168.2.1 OK
2000.1.8-17:55:27	USER: Add new user admin OK
2000.1.8-17:55:29	FOLDERSHARE: Add new folder share public OK
2000.1.8-17:55:30	GROUP: Add new group guest-share OK
2000.1.8-17:55:30	GROUP: Modify group guest-share : members= &admin.& OK
2000.1.8-17:55:30	GROUP: Add new group guest-share OK
2000.1.8-17:55:30	USER: Add new user guest-share OK
2000.1.8-17:55:32	FOLDERSHARE: Modify folder share public OK

Personal Information

Account

Account is the only section in "Personal Information". You could change the password of user 'admin' and the language of the GUI. Besides, share list, system disk quota and the percentage of disk used will be shown as well.

The screenshot shows the ARGOSY web interface. At the top, there is a navigation bar with tabs for 'Basic', 'Control Panel', 'Personal Info', and 'Logout'. Below this, a sidebar contains 'Personal Information' and 'Account'. The main content area is titled 'Account Information - admin' and contains the following fields and information:

- Change Password:** Two password input fields, one followed by '(Confirm)'. Both fields contain a series of dots.
- Language Preference:** A dropdown menu currently set to 'English'.
- Description (Optional):** A text input field.
- Quota:** A table with two columns: 'Quota' and 'Used'.

Quota	1
Used	--
- Disk Usage:** A table with two columns: 'Disk Usage' and 'Percentage'.

Disk Usage	Percentage
	--
- Share List:** A text area containing the text: 'The Disk type is FAT32, can't support quota function.', 'public (Writable)', and '==== END LIST ====='. Below this are 'Save' and 'Refresh' buttons.

Logout

Click Logout to logout off this device.

Mapping a Network Drive in Windows XP


Mapping a Network Drive in Windows XP

After mapping a specific folder as a Network Drive, you can access it easily in **My Computer**.

We will show you an example of this operation in Windows XP. For other operation systems, please refer to the manuals of their respective manufacturers.


A USB external drive connected to this device will be seen as `\\your-hostname\usb1` or `\\your-hostname\usb2` in Windows Explorer. You can also map it with the following steps.

1. Click **Start** button in Windows taskbar => Click **Search** => Click **Computer or people** => Click **A computer on the network** and a new window will appear.
2. Input the hostname of this device in the **Computer Name** column, which you set previously in **Control Panel > System > LAN Settings > Hostname** (page 18) chapter; or you can also input the description of this device, which you set previously in **Control Panel > File and Print > File Server > Windows Setting > Description** (page 15). Click the **Search** button, and you will find search results in the right column.

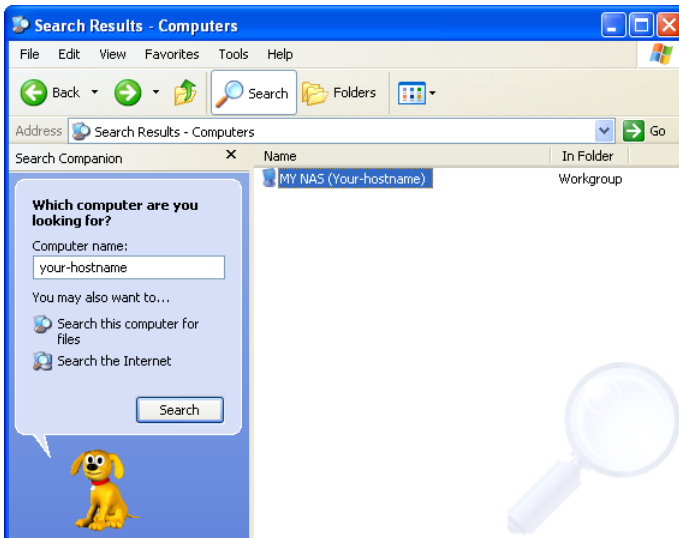


3. Double click on the computer icon. You can also access this device directly by inputting `\\your-hostname` (default `arinas`) in the URL bar of an Explorer window.
4. Right click on the folder you want to map and select **Map Network Drive**.

Mapping a Network Drive in Windows XP

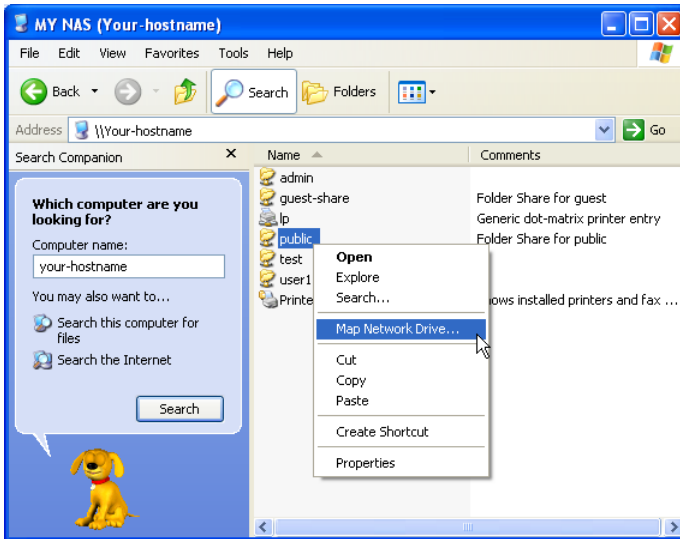

5. A Map Network Drive dialogue box will be shown. Specify a drive letter for the folder chosen and click **Finish** button to complete mapping.

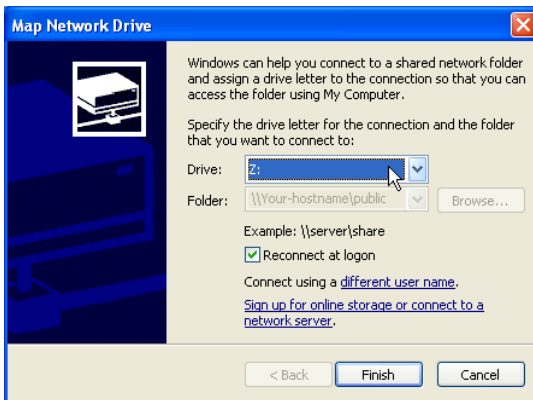


6. A "Connect to Your-Hostname" dialogue box will be shown. Input a username and its password your previously set in **Control Panel > File and Print > Windows and FTP Access** (page 16). You can enable automatic login process in the future by checking the "remember my password" box. You will need to input the username and its password again each time you tried to access this network drive if the "remember my password" box is left unchecked.

Mapping a Network Drive in Windows XP



7. The selected folder will now be shown in **My Computer**. You can then access it like a local hard drive.

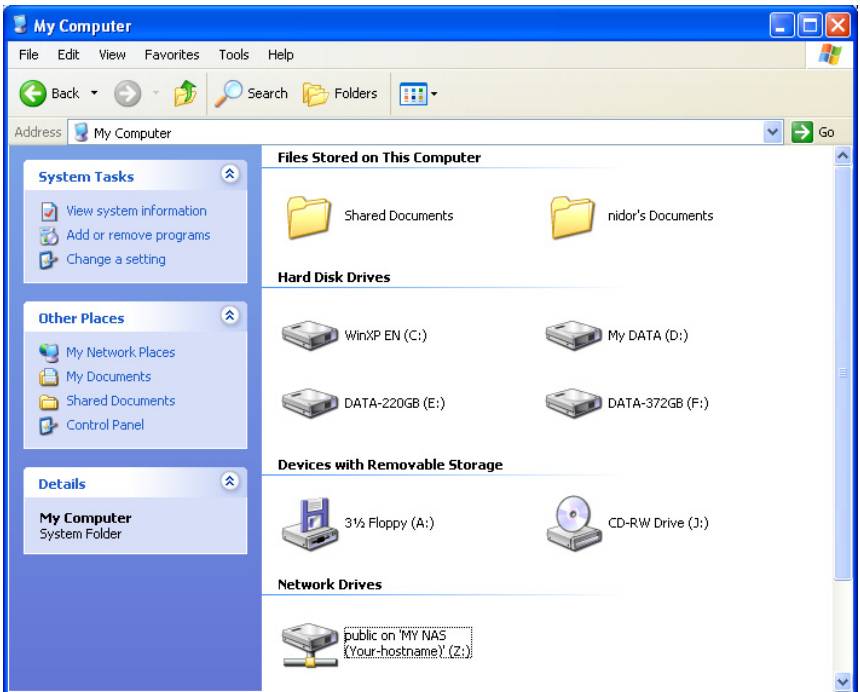


Printer Setup in Windows XP


You can enable access of a network printer to members in the same LAN environment. We will show you an example of this operation in Windows XP. For other operation systems, please refer to their manuals of respective manufacturers.

Take the installation of EPSON AcuLaser C1100 printer as an example.


1. Connect the USB printer and this device with the printer's USB cable. The printer will be automatically detected by this device.

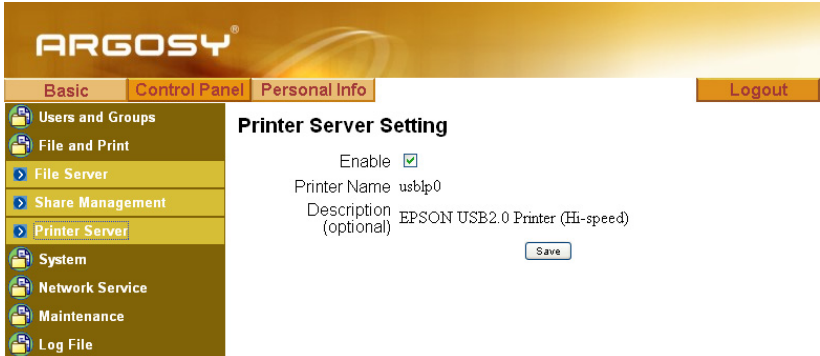

2. Input "\\your-hostname" (default **arinas**) in the URL bar of an Explorer window. Double click on the "lp" icon.

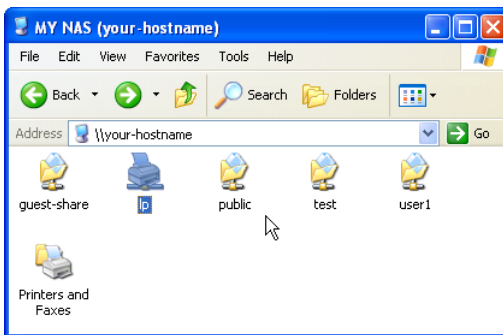


3. A dialogue box will pop up. Click Yes to continue.

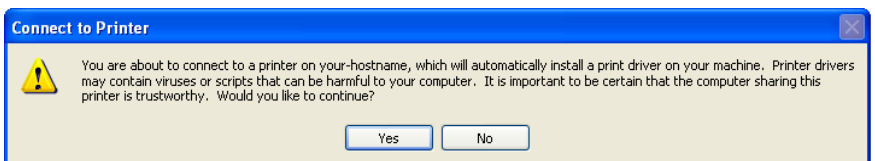


4. Another dialogue box will pop up. Click OK to continue.


Printer Setup in Windows XP

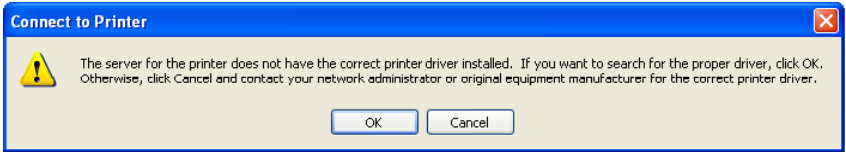


5. In the Add Printer Wizard window, select the manufacturer and printer model corresponding to the printer connected. If the manufacturer of the specific model of your printer is not available in the list, click on the "Have Disk..." button to install its driver from the driver disk provided by the manufacturer.

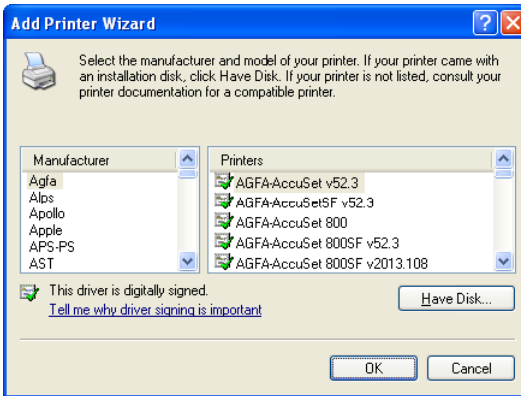


6. Insert the driver disk into your local computer. Click the "Browse..." button to select the corresponding INF file in the driver disk. Click OK to proceed on installation.

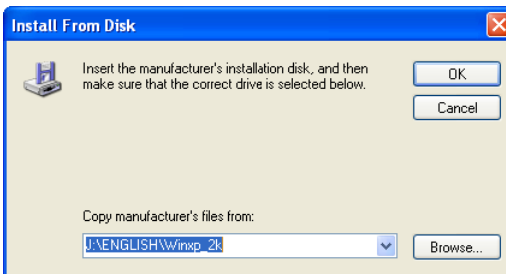


7. Click OK to proceed on installation.

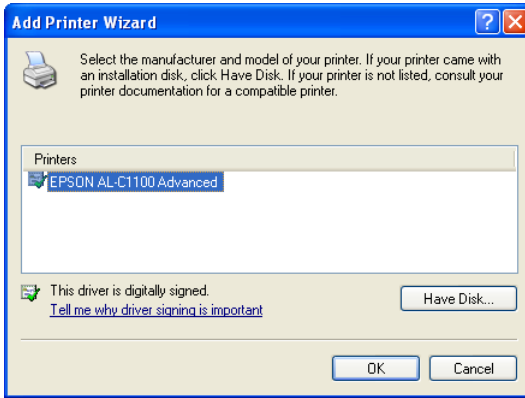

8. A "Connecting to lp on your-hostname" dialogue box will pop up during the installation process. The installation process may take several minutes to complete, please wait.

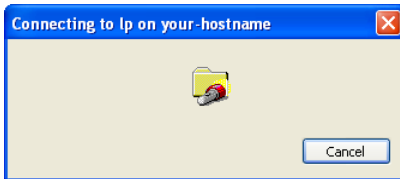

9. When the installation process is complete, a "lp on your-hostname" window will be shown. Now you can print documents using the printer installed. Each member in the LAN will have to complete above installation before using this printer.

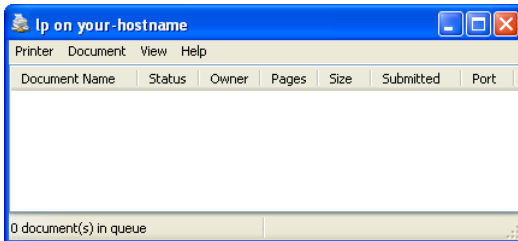


Mounting SMB Server in Mac OS X

Mounting SMB Server in Mac OS X


First, you have to make sure that local Mac and this device are in the same LAN environment.

Then you can connect to this device using SMB protocol, by inputting a URL starts with **"smb://"**.

1. Click on the **Apple Menu**, and select **Location -> Network Preferences**.

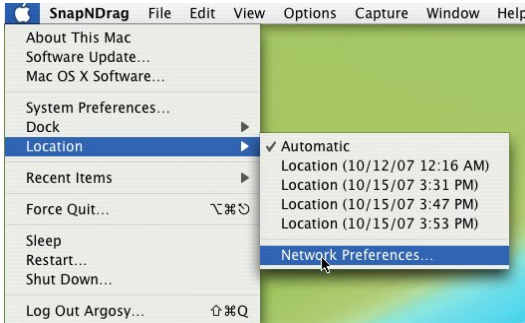


2. A Network window will show. Select **Built-in Ethernet** in the **Show:** pop-up menu.

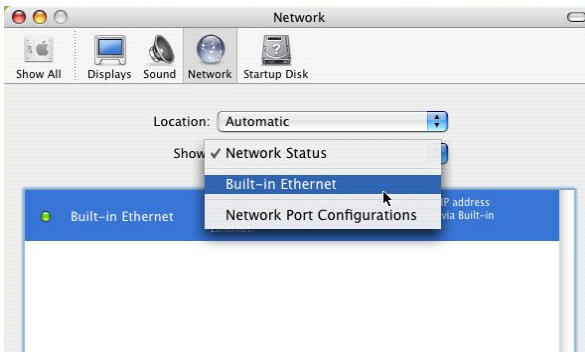


3. Select **Using DHCP** in the **Configure IPv4** pop-up menu.


Mounting SMB Server in Mac OS X

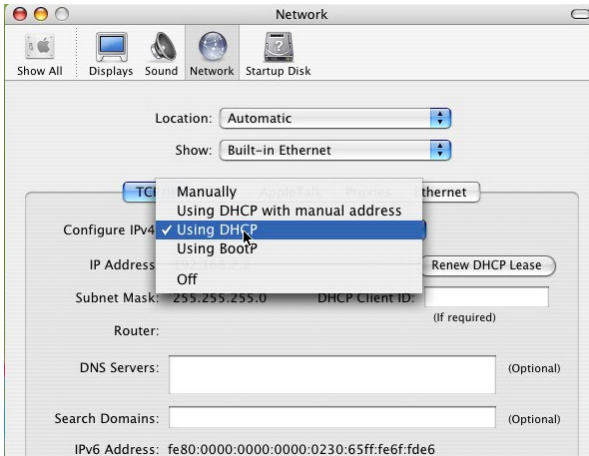

4. The private IP address acquired from the DHCP server is now displayed in this window. You can find the IP Addresses of this Mac and of this device are within the same LAN environment.

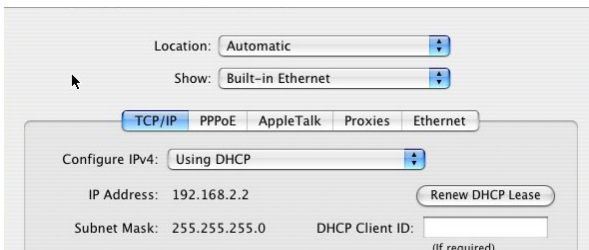


5. Select **Go -> Connect to Server** in the menu bar.

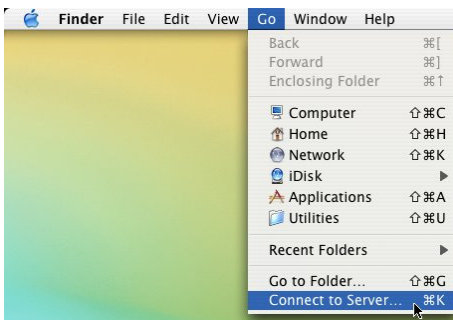

6. The "Connect To Server" window will be shown. Input **smb://NAS-IP**, and then click **Connect**.

Mounting SMB Server in Mac OS X

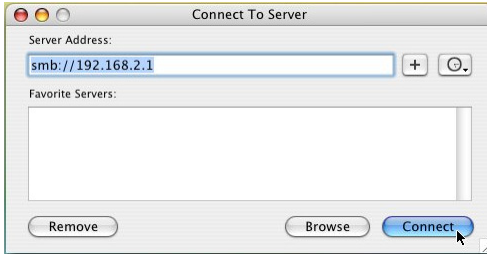

7. A "Connecting to smb://NAS-IP" progress bar will be shown first, followed by the "SMB Mount" window. Select a folder (ex: **admin**) in the "Select a share" pop-up menu and then click OK.




8. Input Username and Password in the "SMB/CIFS Filesystem Authentication" window, and then click **OK**.




9. If the connection succeeded, you can see the NAS icon in the left column.

Mounting SMB Server in Mac OS X

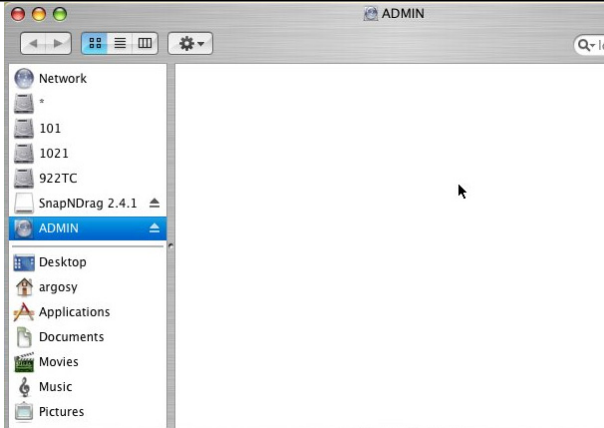

10. Click the symbol by the right side of the NAS icon to unmount this device.

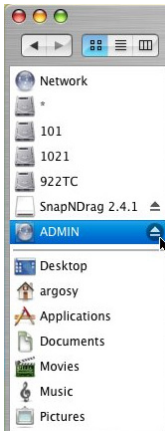

Mounting SMB Server in Linux

Mounting SMB Server in Linux

The following operation is performed in Fedora command line environment. The IP address of this device is set to 192.168.2.1 (its default value). Actual scenario of application may vary from case to case.

1. Using the **smbclient** command to check the content of the NAS.
 - Input **smbclient -L 192.168.2.1 -U admin** after the prompt. The system will prompt you with "**Password:**". Input **admin** (the default password for user **admin**) to get a list of directories within the NAS.

```
[root@localhost misc]# smbclient -L 192.168.2.1
Password:
session setup failed: NT_STATUS_LOGON_FAILURE
[root@localhost misc]# smbclient -L 192.168.2.1
Password:
Domain=[ARINAS] OS=[Unix] Server=[Samba 3.0.20]

  Sharename      Type      Comment
  -----
  admin          Disk
  public         Disk      Folder Share for public
  guest-share    Disk      Folder Share for guest
  usb1           Disk      usb disk
  IPCS           IPC       IPC Service (HD354N NAS)
  ADMIN$        IPC       IPC Service (HD354N NAS)
  Ip             Printer   Generic dot-matrix printer entry
Domain=[ARINAS] OS=[Unix] Server=[Samba 3.0.20]

  Server          Comment
  -----
  Workgroup       Master
  WORKGROUP       ARINAS
[root@localhost misc]#
```

2. Create a folder as the mount point for the NAS.
 - Input **mkdir /mnt/admin** after the prompt for mounting of the shared directory "admin".

```
[root@localhost ~]# mkdir /mnt/admin
```

- Input **mkdir /mnt/usb1** after the prompt for mounting of the USB external drive.

```
[root@localhost ~]# mkdir /mnt/usb1
```

3. Mount the NAS with **mount** command.
 - Fedora 5 and later: Input **mount -t cifs -o username=admin //192.168.2.1/**

Mounting SMB Server in Mac OS X

/mnt/admin/ after the prompt to mount the shared directory.

```
[root@localhost ~]# mount -t cifs -o username=admin //192.168.2.1/admin /mnt/admin/  
Password:  
[root@localhost ~]# █
```

Input **mount -t cifs -o username=admin //192.168.2.1/ /mnt/usb1/** after the prompt to mount the USB external drive.

```
[root@localhost ~]# mount -t cifs -o username=admin //192.168.2.1/usb1 /mnt/usb1/  
Password:  
[root@localhost ~]# █
```

- Fedora 4 and earlier: Input **mount -t smbfs -o username=admin //192.168.2.1/ /mnt/admin/** after the prompt.
 - After the input of the **mount** command, the system will prompt you with **"Password:"**. Input the corresponding password of the user.
4. Unmount a directory mounted.

- Input **umount /mnt/admin/** to unmount the shared directory.

```
[root@localhost ~]# umount /mnt/admin/  
[root@localhost ~]# █
```

- Input **umount /mnt/usb1/** to unmount the USB external drive.


```
[root@localhost ~]# umount /mnt/usb1/  
[root@localhost ~]# █
```

Network Applications

Personal Data Backup

For a single user, you can use this device as an external hard drive to store your data via Ethernet connection.


Personal Backup

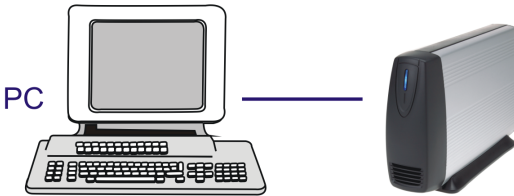

Network File Sharing

With this device, a group of people in a LAN environment can share and store files over Ethernet connection. This device could work with 10/100/1000 Base-T Ethernet environment.

Files Sharing / Remote Data Backup

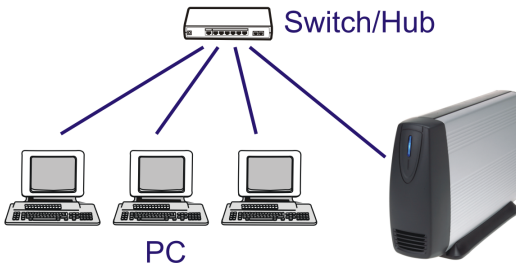

FTP Server

This device features FTP function. You can access the FTP via a web browser or a FTP client.

1. If you are in the same LAN of this device, simply input "**ftp://your-account@your-hostname_or_IP address/**" in your browser's URL bar and press Enter key; or open a connection by **your-hostname** (or its **IP address**) with a FTP client. Login with a set of username and password you set previously to get access to this device.




Internet Explorer 7 can not open FTP connection. You have to use Windows Explorer instead

2. If you are accessing this device over Internet connection, the router of this device will

have to set a NAT mapping on port 21 for FTP protocol. In the URL bar of your browser, input "**ftp:// your-account@router-hostname_or_router-public-IP**" instead. It is recommended to have a static IP address for the router of the FTP server to enable stable connections.

FTP Server

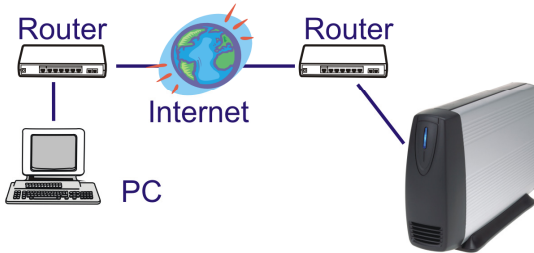

Printer Server

Connect a USB printer to this device and share this printer to members in the same LAN. **Note:**

GDI Interface printers are not supported.

Printer Server



USB Mass Storage Device

Connect your USB Mass Storage Device to this device. The two USB ports can supply up to 350mA of current in total. If you would like to connect a USB external HDD to one of the USB host ports, it is recommended to apply external power to the USB HDD.

This device will automatically mount a USB Mass Storage Device connected to it. A USB external drive connected to this device will be seen as **\\your-hostname\usb1** or **\\your-hostname\usb2** in Windows Explorer. But you need to manually unmount the USB Mass Storage Device before disconnecting it. You can unmount a USB drive by **Control Panel >**

Network Applications


Maintenance > Disk Utility > clicking "Umount" button (page 22).

USB Mass Storage Device




Trouble Shooting

- **Cannot establish FTP connection with this device using Internet Explorer 7.0.**
 1. Internet Explorer 7.0 cannot be used as an FTP client.
 2. You may use Windows Explorer or a 3rd party FTP client instead.
- **How to configure the TCP/IP network protocol?**
 1. Click Start -> Control Panel -> Network Connections.

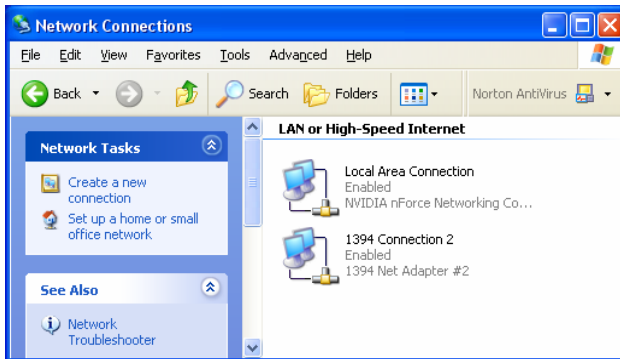


2. Right click on the Local Area Connection icon and select "Properties" in the menu.

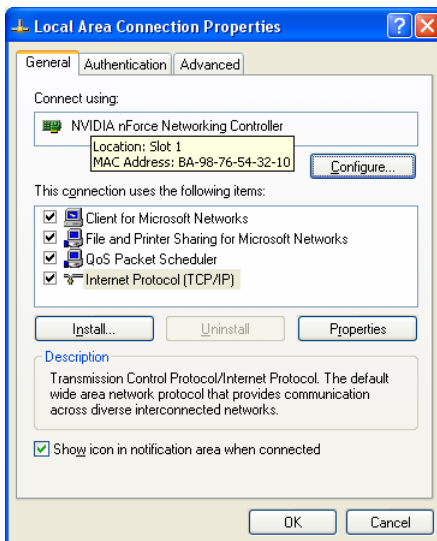

3. Select "Internet Protocol (TCP/IP)", and then click Properties button.

Trouble Shooting

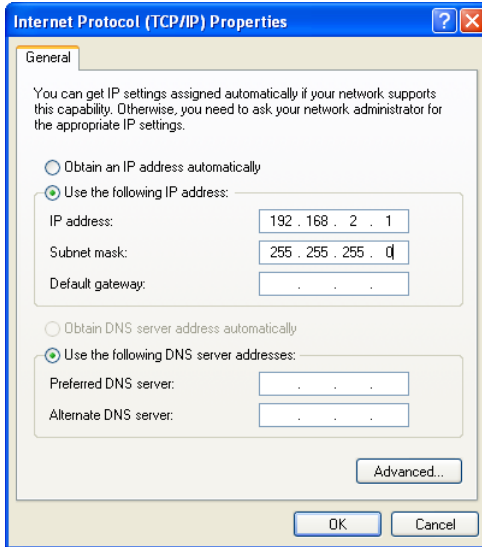

4. Select "Use the following IP address" and then key in the IP address.
5. The Subnet mask will then appear automatically in the window.

- **How to configure your IP while your system is under Static IP?**

1. Obtain IP, SubNet Mask, gateway, DNS information from your operating system.
2. Reconfigure your computer as a DHCP client by checking "**Obtaining an IP address automatically**" and "**Obtaining DNS server address automatically**".
3. Connect your computer and this device.
4. Setup this device as Static IP via GUI setup window.
5. Change your computer's IP settings back to previous ones.
6. Connect your system back to LAN.

- **Lose accessibility to this device.**

1. Please check all physical connections to this device and check if the blue LED lights up.
2. Check the network settings according to the instructions of your operating system on how to make successful connections to network devices.

- **Would this device be attacked by a virus?**

Although the firmware itself is not vulnerable to virus attacks, the data stored in this device could still be infected by viruses. Using an anti-virus program in client ends is recommended.

- **What should I do if I forgot my password?**

In case you have your password or your IP configuration forgotten, this device features a reset button to restore all settings to factory default:

1. Press the "Reset Key" for 5 seconds using a pointed object when this device is powered on.
2. The orange LED will light up.
3. After the orange LED goes out and the blue LED lights up, this device will have restored factory default settings.



After the reset, all the configurations and setting will be lost. We recommend you to back up your settings regularly.

- **I can see only a "Internet trash folder" after connecting to this device using FTP connection.**

This happens when the account is set to "Create Private Folder" (page 13), and user tries to performing FTP connection using Internet Explorer. Shared folders locate one step upper than the Private Folder. However, Internet Explorer does not have the ability to access parental directory. Using an FTP client program instead of Internet Explorer would solve this problem.

- **Backing-up fails if a file exceeds 4GB.**

The maximum size of a single file supported by FAT32 is 4GB. Please format your hard drive as EXT3 if you need to back up a file which exceeds 4GB in size. The maximum file size of a single file in EXT3 is 16GB.

- **Standard factory settings:**

IP: 192.168.2.1 (when a DHCP server is not present)

Host name: arinas

Login: admin

Password: admin

- **How to check the IP address of this device if it is connected to a router?**

Start command prompt by **Start -> Run -> "CMD"**. Input **"nslookup your-hostname"** (for instance **"nslookup arinas"**) to verify the IP address of this device.

