



FE2220 FW update setup

1. Connect to the Internet, keep the PC and the IP of FE2220 in the same LAN.
2. Open the FW file, double-click the “tftpd32” software as the following picture.

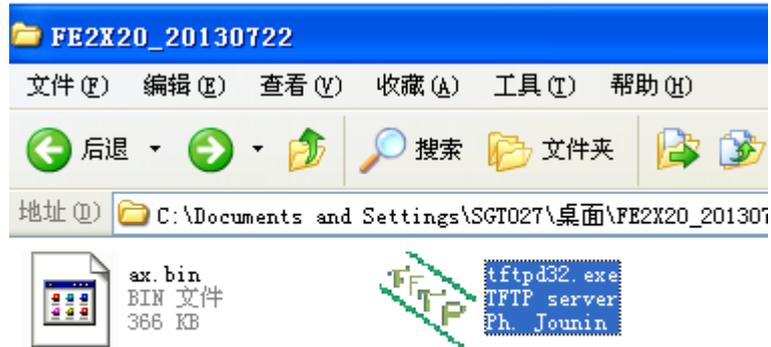

PS: The FW and tftp software should be put in the same file.

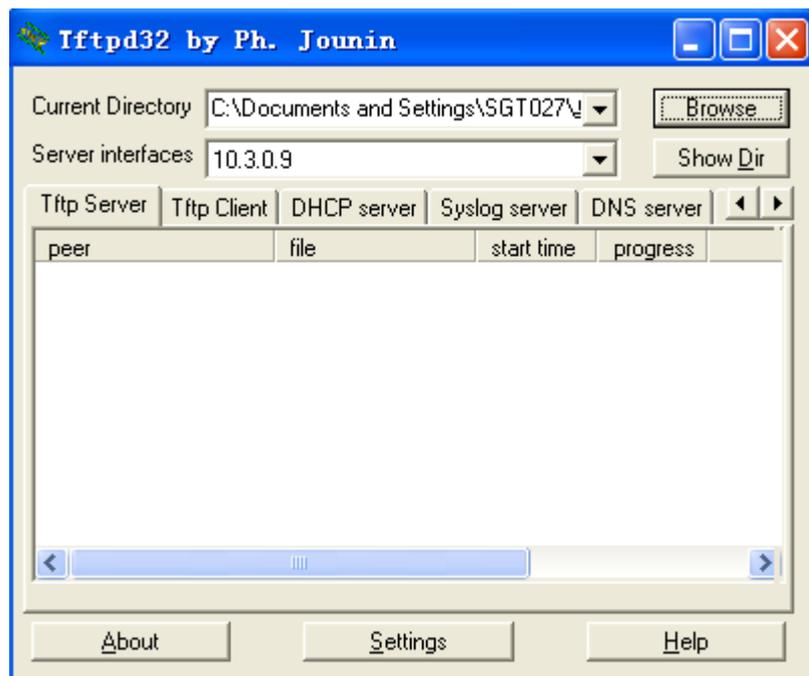

PS: Server interfaces IP is the tftp software could automatic identify the IP of PC

3. Oper the web interface of FE2220, Firmware Upgrade Settings, as the following picture.

Fill in tftp server IP (which in accordance with the IP of tftp software identify automaticall and File name (which should in accordance with the FW name in the file) then click the Apply, after finished the above-mentioned steps, then click the Firmware Upgrade.

PS: During the FW update process, please don't switch off the electricity and network, it will be OK after completed the update then automatic display the web login interface.

