

Sports Camera

# AirBox User's Manual

## Table of Contents

AirBox Product Information .....	2
User Instructions .....	2
Changing Modes .....	5
Recording Videos .....	5
Taking Photos .....	5
Adjusting the Settings .....	6
Troubleshooting .....	8

# AirBox Product Instructions

## \*\* ATTENTION \*\*

- Do not operate or adjust the device while it is in motion.
- This product is protected by international copyrights. All rights reserved.

## Contents

### 1. Camera holder



### 2. Surface Mount



### 3. Bike Mount





## User Instructions

### Holder





1. Place the camera on the bottom part of the holder (check for the direction: the direction of arrow should face the reverse direction as the camera).
2. Press down the fasteners on both sides of the upper holder and push them into place until a "click" sound is heard. The camera should now be securely mounted.

To remove the camera, press the fasteners on both sides at the same time.

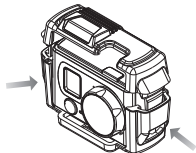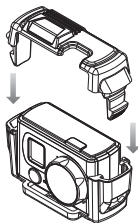


## Surface Mount

 1. Place the T-socket located on the rotating arm of the adhesive mounting bracket into the groove on the holder below the camera. The T-socket should click firmly into place.
2. The holder should be mounted on a smooth flat surface. Wipe off any dust from the chosen surface with a clean cloth before applying the sticker.
3. Peel off the 3M sticker and then press firmly on the surface for approximately one minute. (Wait for 6-8 hours for the 3M sticker to tightly adhere before use.)
4. To adjust the angle, first manually release the locking nut. The round base joint should now freely rotate at a 180 degree angle.
5. Once the preferred angle is found, turn the locking nut until it is securely held in place.

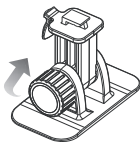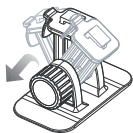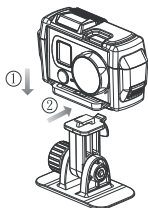


To remove the camera from the base, support the camera with your thumb before using the index finger of the other hand to gently press the release button located on the back of the rotating arm.

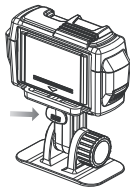


## Bike Mount

1. Place the T-socket located on the top of the bike mounting bracket into the groove on the holder below the camera. The T-socket should click firmly into place.

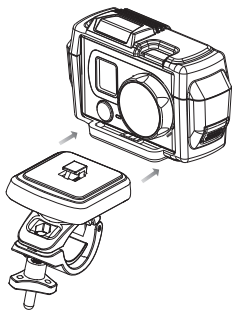

To remove the camera from the base, support the camera with your hand before using the other hand to gently press the bike mount.

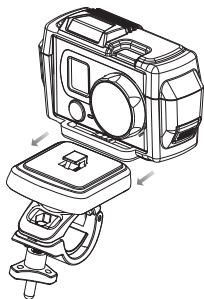

### CAUTION!

- Keep away from fire and other heat sources.
- Do not attempt to dismantle the device. This could cause damage to the product.
- Any damage caused by dismantling the device will void the product warranty.


## Technical Support

If you have any questions or comments, please contact us at: [support@pqigroup.com](mailto:support@pqigroup.com)

Our technical support personnel will respond to you as soon as possible. Thank you for choosing and purchasing PQI product!

## Changing Modes

Press the **MENU** button repeatedly to change modes.

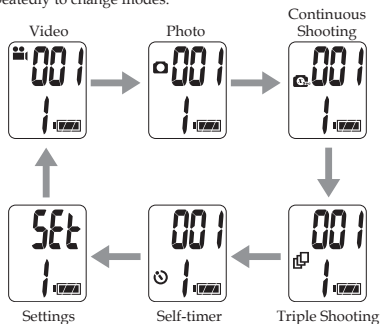

## Recording Videos

1. Turn on the video camera. It automatically opens to Video mode.
2. Press the **SHUTTER** button to start recording.
3. Press the **SHUTTER** button again to stop recording.



## Taking Photos

1. Turn on the video camera.
2. Press the **MODE** button to switch to Photo mode.
3. Press the **SHUTTER** button to capture a photo.



## By Continuous Shooting

This feature allows you to capture several photos with one press of the **SHUTTER** button.

 
1. Turn on the video camera.
2. Press the **MODE** button repeatedly to switch to Continuous Shooting mode.
3. Press the **SHUTTER** button to start capturing photos.
4. Press the **SHUTTER** button again to stop capturing photos.



## By Triple Shooting

This feature allows you to capture three consecutive photos with one press of the **SHUTTER** button.


1. Turn on the video camera.
2. Press the **MODE** button repeatedly to switch to Triple Shooting mode.
3. Press the **SHUTTER** button to capture three photos.



## By Self-timer


This feature allows you to capture a photo after a 10-second delay.

 1. Turn on the video camera.
2. Press the **MODE** button repeatedly to switch to Self-timer mode.
3. Press the **SHUTTER** button. The photo is captured after 10 seconds.



## Adjusting Settings

1. Press the **MODE** button repeatedly to switch to Settings mode.
2. Press the **SELECT** button to enter Settings.
3. Press the **MODE** button repeatedly to scroll through the menu options.
4. Press the **SELECT** button to enter a menu. To scroll through the options, press the **SELECT** button repeatedly.
5. To exit Settings mode, select "ESC", and then press the **SELECT** button.

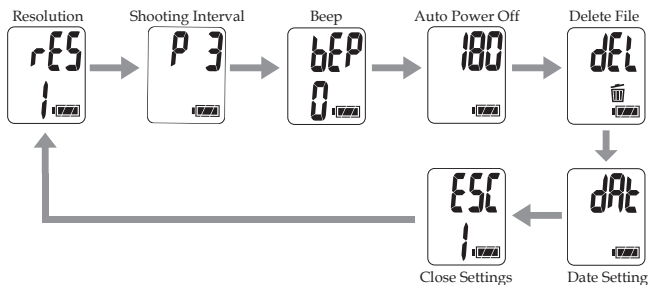

### Resolution






The video camera captures photos with a fixed resolution of 5M and supports five resolution options for videos.

Symbol	Description	Resolution	Frame/second
rES 1	16:9 Full HD Highest Resolution Default	1080P (1920x1080)	30p
rES 2	16:9 Widest HD Video	720P (1280x720)	60p
rES 3	16:9 HD Video	720P (1280x720)	30p
rES 4	16:9 Wide Angle Standard Definition Video	WVGA (848x480)	60p
rES 5	4:3 Tallest HD Video Max Overall View	960P (1280x960)	30p

1. Press the **SELECT** button repeatedly to toggle between the options.
2. Press the **MODE** button to save whichever setting is shown on the screen.

## Shooting Interval



This menu allows you to select the interval options when capturing photos using Continuous Shooting mode.

Symbol	Description
	Shoot photos in 3 seconds interval.
	Shoot photos in 5 seconds interval.
	Shoot photos in 10 seconds interval.
	Shoot photos in 30 seconds interval.
	Shoot photos in 60 seconds interval.

1. Press the **SELECT** button repeatedly to toggle between the options.
2. Press the **MODE** button to save whichever setting is shown on the screen.

## Beep







This menu allows you to enable or disable the beep sound.

Symbol	Description
	Beep sound is ON. (Default setting)
	Beep sound is OFF.

1. Press the **SELECT** button repeatedly to toggle between the options.
2. Press the **MODE** button to save whichever setting is shown on the screen.

## Date and Time

This menu allows you to set the camera date and time settings.




Symbol	Description
	When you see "dat" on the screen, press the <b>SELECT</b> button to set the date and time.
	Press the <b>SELECT</b> button to adjust the year. Press the <b>MODE</b> button to advance to the next date setting.
	Press the <b>SELECT</b> button to adjust the month from o01 (January) to o12 (December). Press the <b>MODE</b> button to advance to the next date setting.
	Press the <b>SELECT</b> button to adjust the day from d01 to d31. Press the <b>MODE</b> button to advance to the next date setting.
	Press the <b>SELECT</b> button to adjust the hour from H00 (12 AM military time) to H23 (11 PM military time). Press the <b>MODE</b> button to advance to the next date setting.
	Press the <b>SELECT</b> button to adjust the minute from n00 (00 minute) to n59 (59 minutes) Press the <b>MODE</b> button to close the date and time setting menu.

1. Press the **SELECT** button repeatedly to toggle between the options.
2. Press the **MODE** button to save whichever setting is shown on the screen.



## Power Off


This menu allows you to program the camera to turn off at 180 or 600 seconds, or you can set to Off to keep the camera on until you manually turn it off.

Symbol	Description
	The camera will turn off 180 seconds after the last button press (unless recording is in progress).
	The camera will turn off 600 seconds after the last button press (unless recording is in progress).
	The camera will only turn off if manually turned off.

1. Press the **SELECT** button repeatedly to toggle between the options.
2. Press the **MODE** button to save whichever setting is shown on the screen.

## Delete

This menu allows you to delete all files in the SD card.

Symbol	Description
	When "dEL" is displayed on the screen, press the <b>SHUTTER</b> button. "dEL" starts blinking. - To delete all files, press the <b>SELECT</b> button. The Red LED blinks as the files are being deleted. - To cancel delete, do nothing until "dEL" stops blinking or press the <b>MODE</b> button to advance to the next menu setting.

1. Press the **SELECT** button repeatedly to toggle between the options.
2. Press the **MODE** button to save whichever setting is shown on the screen.

## Troubleshooting

### "bAt" message on the LCD screen

If you see the "bAt" message on the LCD screen, it means that the battery is almost used up. Charge the camera battery.

### "FUL" message on the LCD screen

If you see the "FUL" message on the LCD screen, it means that the SD card is full. You cannot shoot any or record in this situation. Transfer the SD card files to the computer and delete the files from your SD card.

### "Err" message on the LCD screen

If you see the "Err" message on the LCD screen, it means that the SD card may have compatibility issues. Try to format the card first using the camera (Delete menu). If it still does not work, format using the PC.

### "---" message on the LCD screen

If you see the "---" message on the LCD screen, it means that the SD card is not inserted. Insert the SD card.

## FCC Statement

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off.

The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.