


# Network Schematic

**Technical Notes:**

- wePresent is hardwired to the network
- wePresent receives an IP from the network
- wePresent's WiFi SSID broadcast is enabled
- wePresent's DHCP server is turned off
- Internal users connect to company WiFi
- Guest users connect to the wePresent WiFi

**OPTION B** | Hardwired to internal network with wePresent WiFi enabled as guest network.

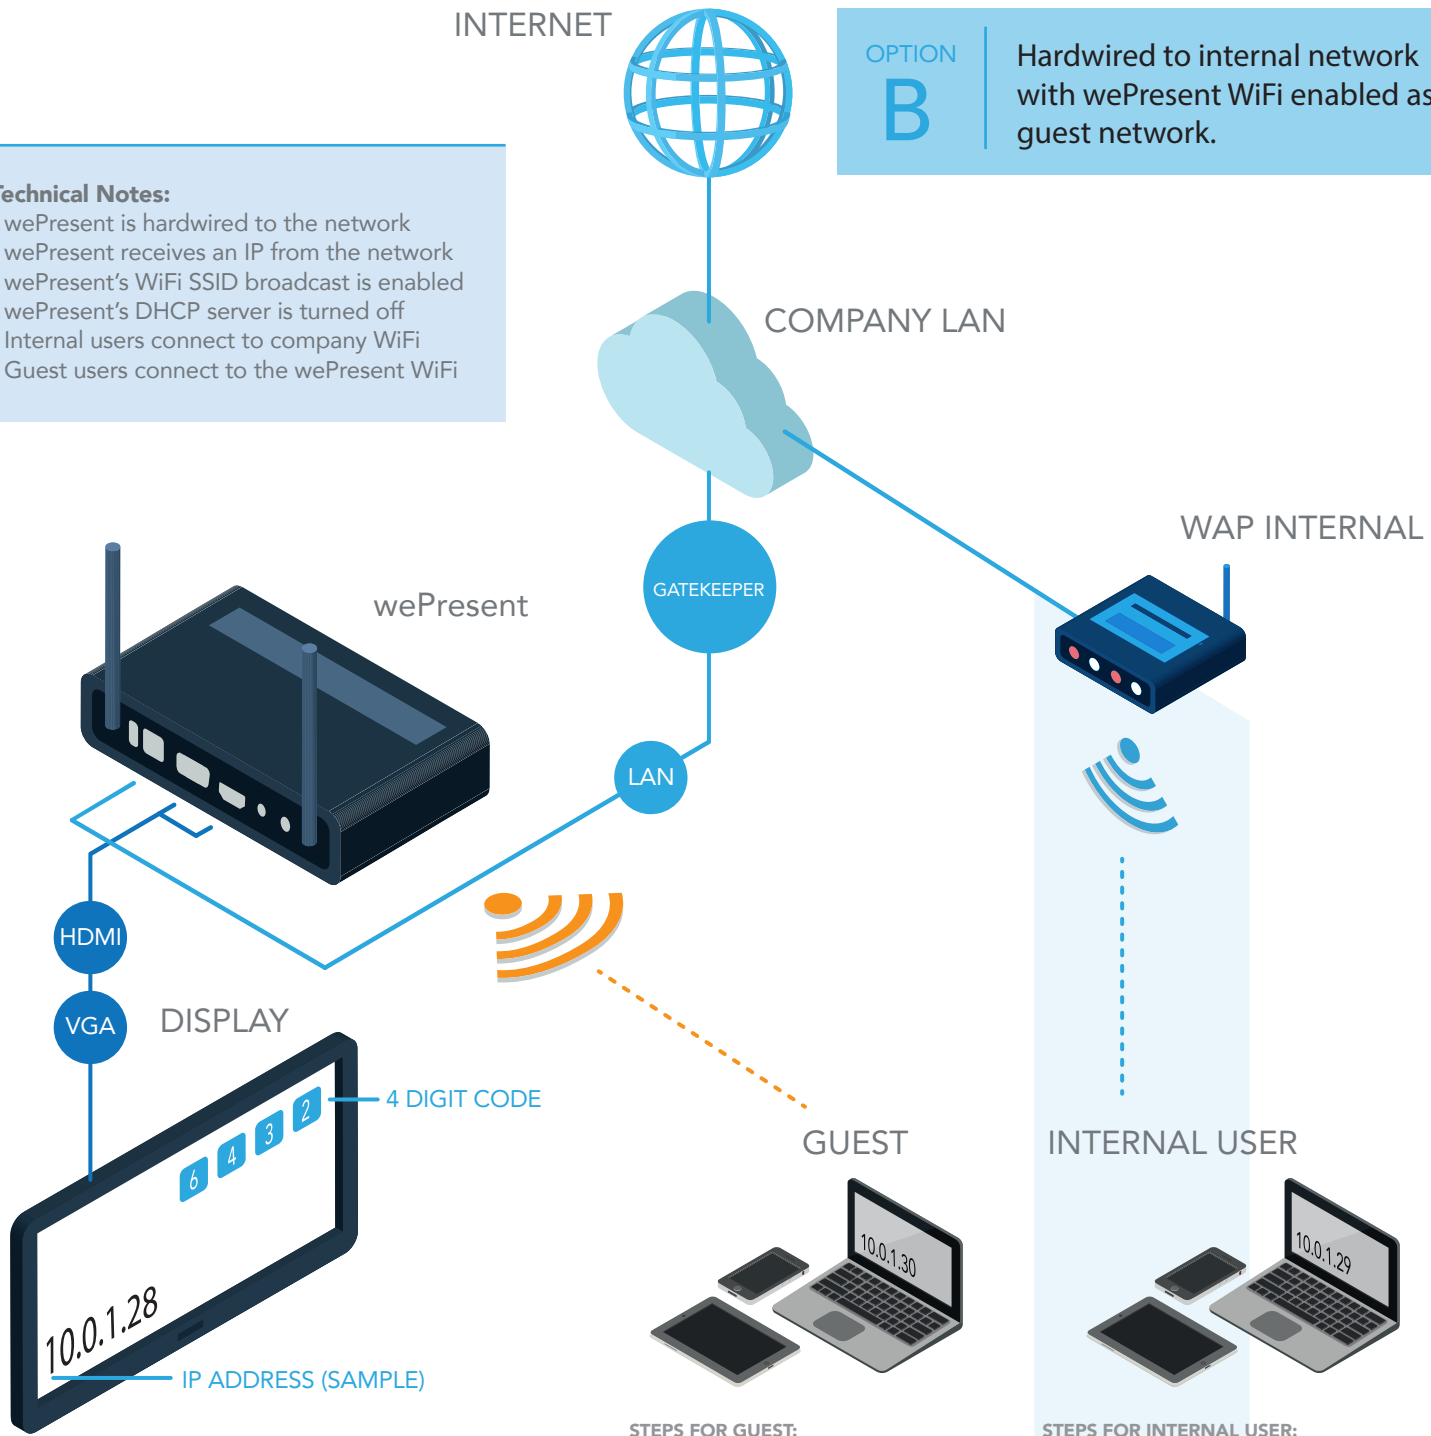

- STEPS FOR GUEST:**
- 1 - Connect to guest network
  - 2 - Use USB guest .exe software
  - 3 - Manually enter ip address
  - 4 - Enter 4-digit code
  - 5 - Present

- STEPS FOR INTERNAL USER:**
- 1 - Connect to internal network
  - 2 - Install wP software
  - 3 - Launch software
  - 4 - Select wP device from the list
  - 5 - Enter 4-digit code
  - 6 - Present

