

USB-NetLink cable

Introduction

Thank you for choosing the USB-NetLink cable. This USB-NetLink cable allows you to setup a network through USB port and share all the resource such as files, printers and other more peripherals between two PCs.

System Requirements

- ★ Pentium-class CPU with USB port PC.
- ★ 1 available USB type A (downstream) port.
- ★ Windows 98 ; Windows Me ; Windows 2000 ; Windows XP.
- ★ iMac(OS8.6 ; 9.0 ; 9.04 ; 9.1) operating system.

Note:

When the operating system is the iMac, please make sure the suitable AP(such as “Win Mounter-E2.0”) must be already installed if you want to use network function.