

POWER QUOTIENT INTERNATIONAL CO., LTD.

14F, No.16, Jian Ba Road
Chung Ho City Taipei, Taiwan, R.O.C.
Tel: +886-2-8226-5288
Fax: +886-2-8226-5268-9
www.pqi.com.tw



Hi-Speed USB Flash Disk USB2.0 Storage

User Manual

Version: A01

Last updated: 2005-10-03

Copyright (C) 2005 Power Quotient International CO., Ltd. All Rights

En

Thank you for using USB Flash Drive.

Before using USB Drive, we advise you to read the following safety instruction to prevent unexpected damage to the product and your data.

< Safety instruction >

Never remove or unplug USB Drive while the status LED is flicking. Your data or FAT table can be corrupted and brings damage to the product and your data.

If your USB does malfunction or has been damaged, you can use it again by re-formatting it. If such statuses occurs and re-format has to take place, please aware all saved data including Program will be erased and users must reinstall necessary program for proper use.

Installation Guide

1 Remove the cover from USB Drive and plug it into USB port of your computer.



 
- For Windows ME, Windows 2000 or Windows XP user, PNP will automatically detect USB Drive as removable disk.
- For Windows 98/98SE user must install USB Drive from CD

Safe way to remove USB Drive from your computer

1 Double click on [unplug or eject hardware] icon in the system tray of the Window Taskbar



2 Remove USB Drive from USB port



Ge

Vielen Dank, dass Sie sich für den USB Flash Drive entschieden haben.
Wir empfehlen Ihnen, folgende Sicherheitshinweise, bevor Sie den USB Drive in Betrieb nehmen, durchzulesen, um unerwartete Schäden am Gerät oder an Ihren Daten zu vermeiden.

< Sicherheitshinweise >

Entfernen Sie nie das Gerät von dem PC, während die LED-Anzeige am Gerät blinkt. Sonst können Ihre Daten oder FAT verschlechtert werden, wodurch das Gerät und die Daten geschadet werden können. Wenn das Gerät nicht funktioniert oder geschadet ist, können Sie es erst anwenden, nachdem Sie es wieder formatiert haben. Falls das Gerät wieder formatiert werden sollte, werden alle gespeicherten Daten inklusiv das Programm gelöscht, und Sie haben das Programm neu zu installieren.

Installation

1. Installation unter Windows ME/ 2000/ XP

Es ist kein Treiber erforderlich. Diese Windows-Systeme enthalten bereits einen Treiber, der den My Drive unterstützt.

Schieben Sie den My Drive einfach in den USB-Anschluss am PC oder Notebook ein. Im Fenster Arbeitsplatz wird jetzt ein neues Laufwerkssymbol angezeigt.

2. Installation unter Windows 98/98 SE

Wenn Sie mit Windows 98/98 SE arbeiten, stecken Sie den My Drive in den USB-Anschluss ein.

 
- Legen Sie die CD mit dem Treiber ein.
- Es wird Ihnen weisen, wie den Treiber installiert wird. Folgen Sie den Weisungen auf dem Bildschirm.
- Im Fenster Arbeitsplatz wird jetzt ein neues Laufwerkssymbol angezeigt.

Entfernen des USB Drive

1. Durch Doppelklick auf das in der Taskleiste befindliche Symbol können Sie "USB Mass Storage Device" deaktivieren.



2 Entfernen Sie My Drive vom USB-Anschluss.



It

Ringraziamo per l'uso del USB Flash Drive. Leggere attentamente seguente istruzione di salvaguardia prima di usare il USB Drive per evitare il danno eventuale del prodotto e i vostri dati.

< Istruzione di Salvaguardia >

Durante il lampo di LED si accende e spegne velocemente, non togliere il USB Drive e non staccare la spina. Questo può causare l'errore ai dati o FAT tavolo. Se sia guasto il USB o ci sia qualche problema del funzionamento, è possibile riformare. Quando è necessario riformare, tutti i dati risparmiati incluso il Program saranno cancellati quindi l'utente deve reinstallare tutti i programmi necessari.

Modo di installare

Aprire il coperchio di USB Drive e inserire al USB porto di computer. Se usate Windows ME, Windows 2000/Windows XP, il PNP trova automaticamente USB Drive per il disco mobile. Se usate Windows98/98SE, dovete installare USB Drive con il CD. ter.

 


Per cancellare sicuramente il USB Drive nel Computer

1. Dobbio cliccare "unplug or eject hardware" sulla vaschetta di Window taskbar.



2. Cancellare il USB Drive nel porto di USB.



Sp

Gracias por el uso de USB Flash Drive. Antes de usar USB Drive, le recomendamos leer la siguiente instrucción de seguridad para evitar los daños inesperados en el producto y sus datos.

< Instrucción de seguridad >

Nunca quite o desconecte la unidad de USB mientras se parpadea DEL (diodo electroluminiscente) de estado. En caso contrario, sus datos o la tabla de FAT podría ser degradada y ocasionar los daños en el producto o sus datos. Si su USB funciona erróneamente o ha tenido algún daño, usted podrá usarlo después de realizar nuevamente el formateado. En caso que ocurra esta situación y deba realizar el formateado, por favor, almacene todos los datos incluyendo el Programa , que seran borrados, y el usuario debe reinstalar los programas necesarios para el uso apropiado.

Guia de instalación

1. Retire la cubierta de la unidad de USB e inserte en la puerta de USB de su computadora. (Para los usuarios de Windows ME, Windows 2000 o Windows XP, el PNP detectará automáticamente la unidad de USB como un disco amovible) (Los usuarios de Windows 98/98SE deben instalar la unidad de USB, usando el disco compacto)

 


Método seguro para retirar la unidad de USB de su computadora

1. Oprima dos veces el icono de "Desconectar o expulsar el hardware" en la ficha de sistema de la tabla de trabajo de Windows.



2. Retire la unidad de USB de su puerta.



Fr

Merci d'utiliser USB Flash Drive.

Avant d'utiliser USB Drive, nous vous conseillons de lire les informations suivantes afin d'éviter des dommages non attendus sur le produit et sur vos données.

< Instruction - Sécurité >

Ne jamais changer ou débrancher la prise USB pendant que le statut LED est en marche. Vos données ou FAT table peuvent être corrompus et, par la suite, apporter des dommages au produit. Si votre USB connaît des disfonctionnement ou est endommagé, vous devez le reformater pour le ré-utiliser. Si cela était le cas, veuillez faire attention à sauvegarder toutes vos données sachant qu'il faudra réinstaller obligatoirement le programme pour un bon usage.

Guide d'installation

1. Enlever le couvercle de la clé USB et brancher le au port USB de votre PC (pour Windows ME,2000 ou XP, PNP détectera automatiquement USB Drive comme disque amovible)
(pour windows 98/98SE, installer la clé USB à partir du CD)



La meilleure façon d'enlever clé USB de l'ordinateur

- 1 Double cliquer sur l'icône " unplug or eject hardware " sur la ligne de la barre d'outil Windows.



- 2 Enlever la cle USB du port USB de votre PC.



Manual

About Hi-Speed USB Flash Disk

- A. Features 1
- B. System Requirement
1
- C. Product Specification 2

How to use Hi-Speed USB Flash Disk 2

- A. Plug Hi-Speed USB Flash Disk 2
- B. Read and Write data/file
3
- C. Unplug Hi-Speed USB Flash Disk 3

Main Features

5

- DiskSafe Feature 4
 - A. Create the Privacy Area
5
 - B. Using the Privacy Area
6
 - C. Change Password
8
 - D. Change the capacity of Privacy Area
10
 - E. Security Feature
11

About Hi-Speed USB Flash Disk

Hi-Speed USB Flash Disk is a “**Powerful Speedy USB 2.0 Storage**” product for those seeking to experience the USB 2.0/1.1 storage resolution. Hi-Speed USB Flash Disk has some powerful features –faster access to stored files, unlimited applications, truly trusted security. This is a solution that you could make any PC feel like home, and go with them wherever they go. Hi-Speed USB Flash Disk is the basis storage device that instantly becomes essential lifestyle accessory.

A. Features

- Full Compliance with the USB Specification v2.0 and v1.1
- Different capacity : 256MB, 512MB and 1GB
- High performance in write and read speed
- Plug & Play connection
- No extra power supply is needed, Support USB Bus Power
- The data remains up to 10 years.
- No driver is needed in **Windows ME, 2000, XP, MAC 9.X or above.**
- Windows 98 requires a driver

B. System Requirements

- IBM PC/AT compatible
- Microsoft Windows 98/SE, ME & Windows 2000 and Windows XP
- 32MB RAM (64MB recommended)
- USB Port

C. Product Specification

Product Specifications	
PC system with USB ports	IBM PC / AT & Notebook & Sub-Notebook
Operating System	*Win98SE, Me, 2000, XP
Memory	256MB, 512MB, 1GB

Interface	USB 2.0 Compliant and USB 1.1 Compatible
Data Retention	Up to 10 Years
Suspend Current	<500uA
Operating Current	<500mA
LED built-in	Active LED
Storage Temperature	-10°C - 70°C
Operating Temperature	0°C - 60°C
Relative Humidity under storage	5% - 95%
Weight	1 ounce
EMI Compliance	FCC, CE, VCCI, BSMI
Power Supply	USB bus-powered (4.5V - 5.5V)

*Drivers required for Windows 98SE

**Performance varies depending on testing environment and flash memory

How to use Hi-Speed USB Flash Disk

To use Hi-Speed USB Flash Disk, you just need to plug it into your computer's USB port. Windows ME, 2000, XP and above versions can support the USB Mass Storage driver. Hi-Speed USB Flash Disk will be automatically detected and running well. If you are running Windows 98, you will need to install the driver. You can download the 98 driver from WWW.RITEK.COM Then select Install / Remove Driver to start installation

A. Plug Hi-Speed USB Flash Disk

Once you plug in your Hi-Speed USB Flash Disk, Systems will assign a drive letter to Hi-Speed USB Flash Disk and be a removable disk. You can work with the drive just like another disk drive or floppy diskette.

裝置中含有卸除式存放裝置



3.5 軟碟機 (A:)



CD-RW 磁碟機 (E:)



卸除式磁碟 (F:)

After plugging Hi-Speed USB Flash Disk into the USB Port, you will find a "removable disk" icon on the files manager window.



B. Read and Write data/files

Hi-Speed USB Flash Disk is a light, portable storage device functions as hard disk. You can read, write, copy, or delete data and carry them wherever you go.

C. Unplug Hi-Speed USB Flash Disk



 
Caution!

Do not unplug or remove the device if the read/write LED of the Hi-Speed USB Flash Disk is on or blinking. Please wait for the LED to turn off before you safely remove the device. Please follow safe removal procedure in the Window ME, Windows 2000; otherwise it will make Hi-Speed USB Flash Disk damage or data lose.

You can remove Hi-Speed USB Flash Disk after finishing using the device. However, in Windows ME and Windows 2000 & Windows XP and above, please follow the safe removal procedure. You can find a safe removal icon in your computer's notification area.



Double click the “safe removal” icon, the “Unplug or Eject Hardware” window will pop up. You can select the device you want to remove. Then, click the “Stop” button. After that, you may unplug the device from the USB port of your computer.

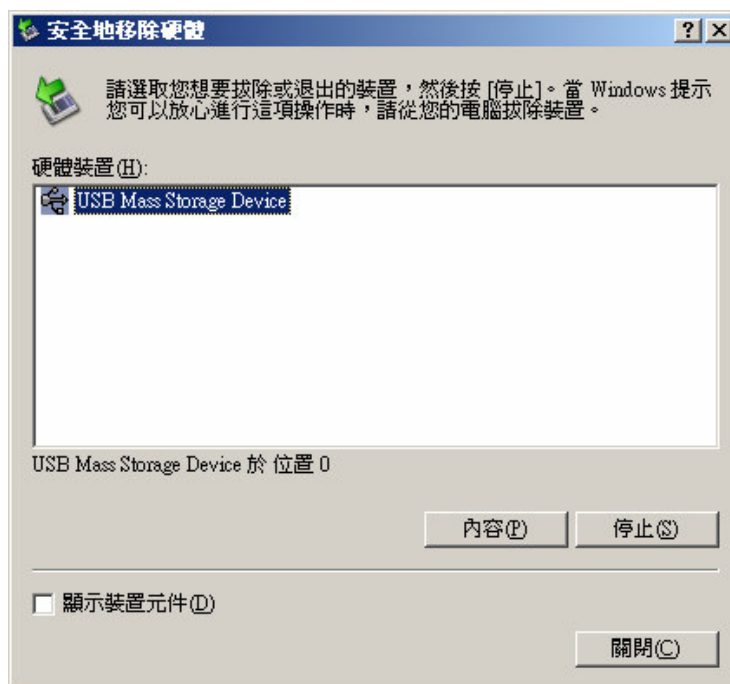

Main Features

DiskSafe Feature

 
A. Creating the Privacy Area



警告!


When you create your Privacy Zone, the Hi-Speed USB Flash Disk is formatted and ALL data will be lost. Please back up your files before you create your Privacy Zone.

1. Please select the removable disk drive that was assigned to your Hi-Speed USB FlashDisk, and double click the DiskSafe software icon.
2. After you read the DiskSafe Welcome window, move the Hi-Speed USB Flash Disk slide bar (up or down) to set the capacity of your secure Privacy area. The secured Privacy area will be shaded red, and the unprotected public area will be shaded blue.

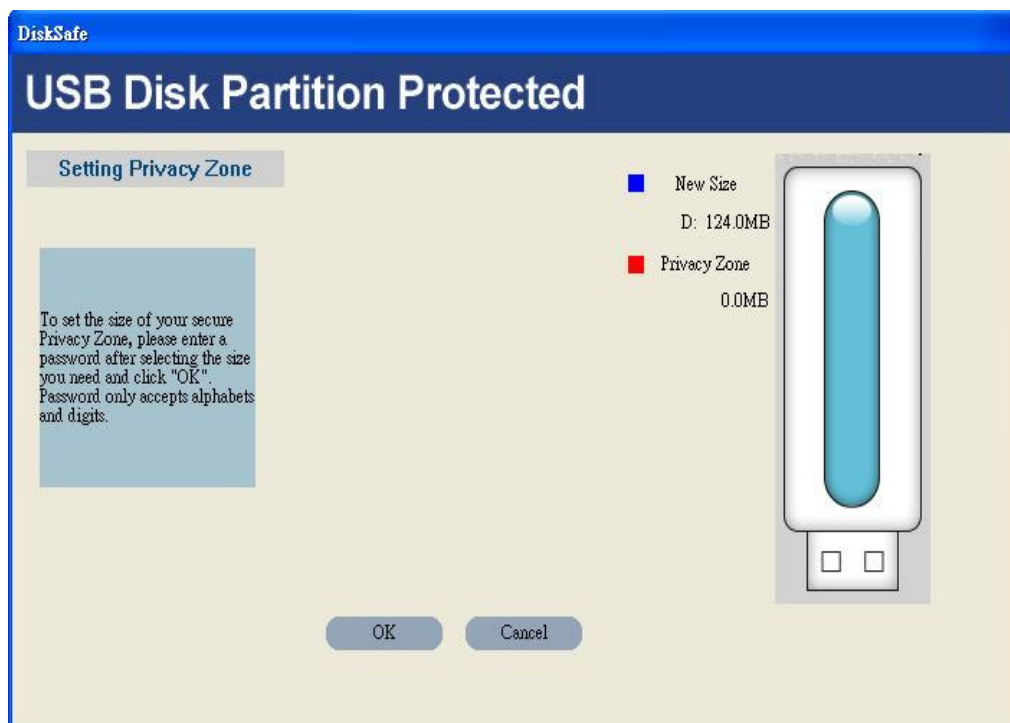

3. When the DiskSafe window is displayed, enter the following information and click “OK”.

 - A. New Password (required)**
- B. Confirm Password (required)**
- C. Hint (optional)**

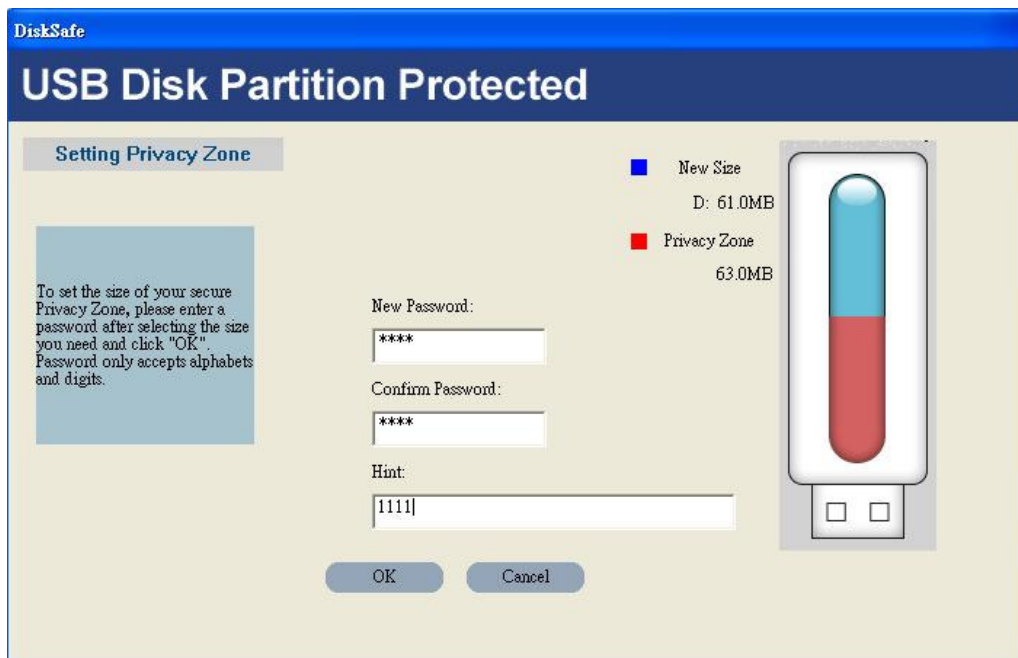

4. The windows will show “Password changed. Device will lock automatically after remove from USB port” . Please click “OK ” to continue.

 


5. Setup password success., please re-plug Hi-Speed USB Flash Disk.



B. Using the Privacy Area


1. After creating a Privacy Area, DisSafe automatically prompts you to login. Please enter your password and click "OK".

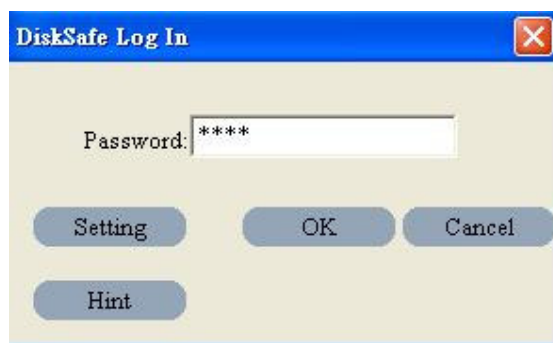



2. If you enter the wrong password, an error message will show up.



 If you forget the password, click "Hint" to display the hint field in DiskSafe login Window.

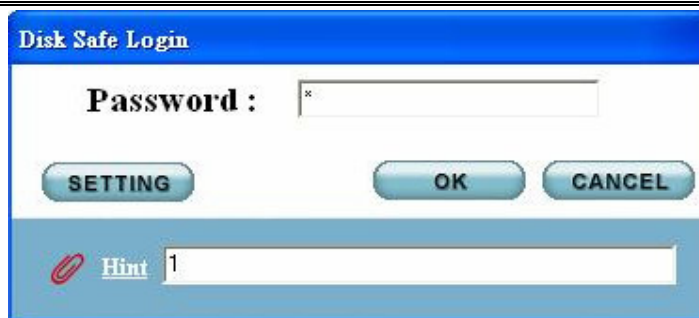

  
3. After logging in successfully, secured Privacy Area will show up automatically and be locked again when you remove the device.

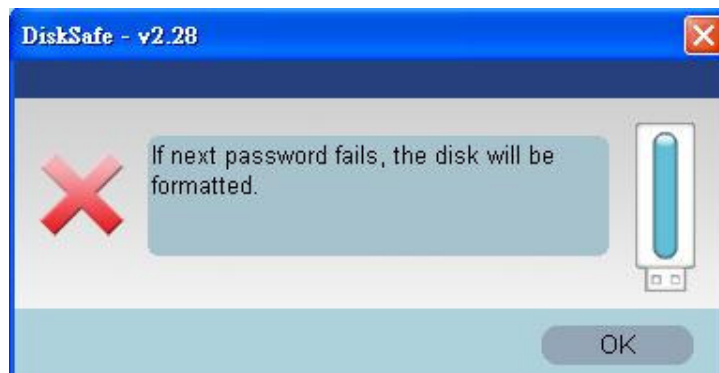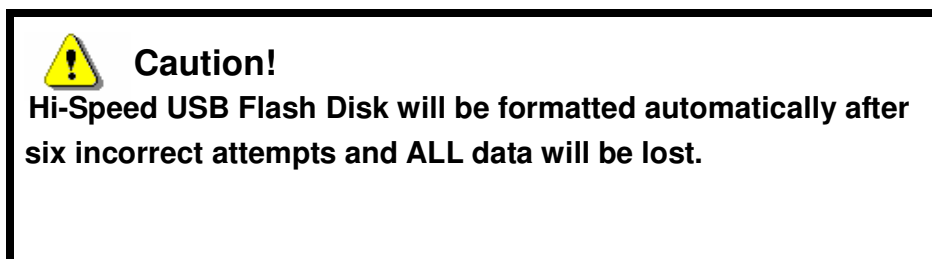


C. Change Password

Change Password Button

 1. To change the password, please enter your password and click "Setting". The Window will show "All the data in the disk will be destroyed, if you do not want so, please close it."

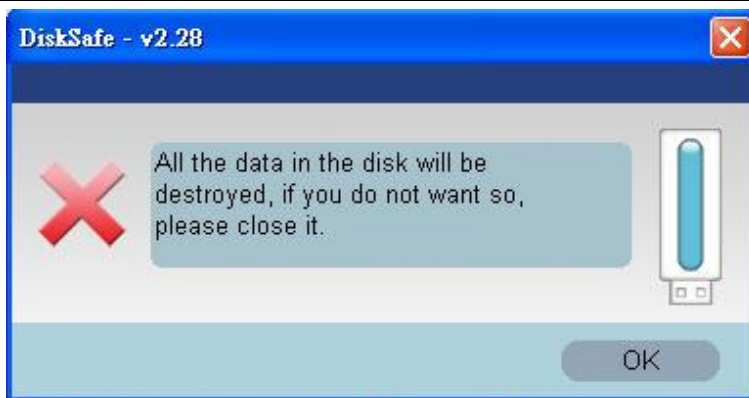

 
2. When the Change Password dialog box is displayed, enter the following data and click "OK".
 - A. Password (required)
 - B. New Password (required)
 - C. Confirm Password (required)
 - D. Hint (optional)

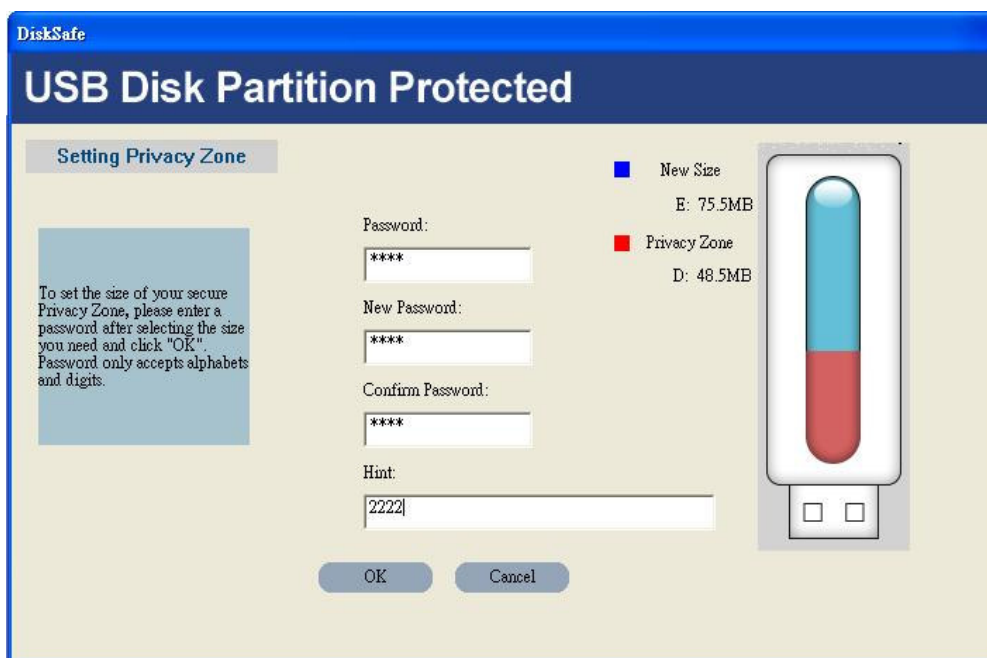

3. The window will show "Password changed". Please click "OK" to complete the process. The device will lock automatically after remove from USB port.




D. Change the Capacity of the Privacy Area

 **Caution!**

 Changing the capacity of Privacy Area will format Hi-Speed USB FlasDisk, that will cause ALL privacy and non-privacy data lost. Please backup your data first before setting the secured Privacy Area.

Change the capacity of Secured Privacy Area

1. Enter your password and click "Setting" to login DiskSafe window.

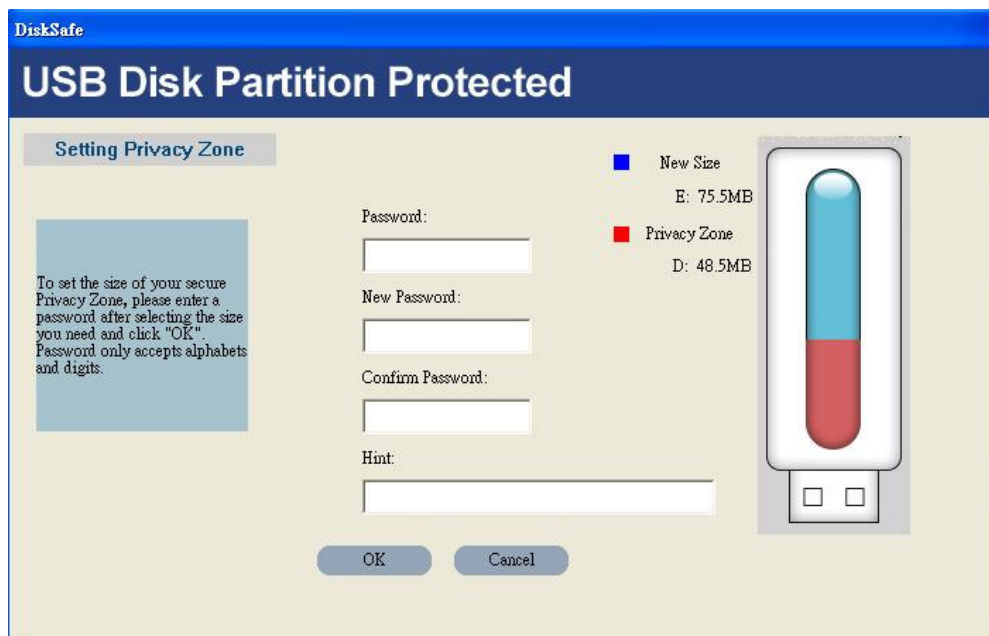

4. Enter a hint in case you forget your password.
5. Click “**OK**”. The DiskSafe Format Warning window is displayed.
6. Click “**OK**” to reformat your Hi-Speed USB Flash Disk and create a new Privacy Zone.

 
2. Use the slide bar to set the capacity of your Privacy Area.

- A. Password (required)**
- B. New Password (required)**
- C. Confirm Password (required)**
- D. Hint (optional)**

3. Click “OK”. The DiskSafe Format Warning window is displayed.
4. Click “OK” to reformat the Hi-Speed USB Flash Disk.

Remove the Privacy Area

1. Follow the steps 1 to 2 above
2. Set the capacity of Privacy Zone to 0 using the slide bar with your password.
3. Click “OK” , the window will show up.

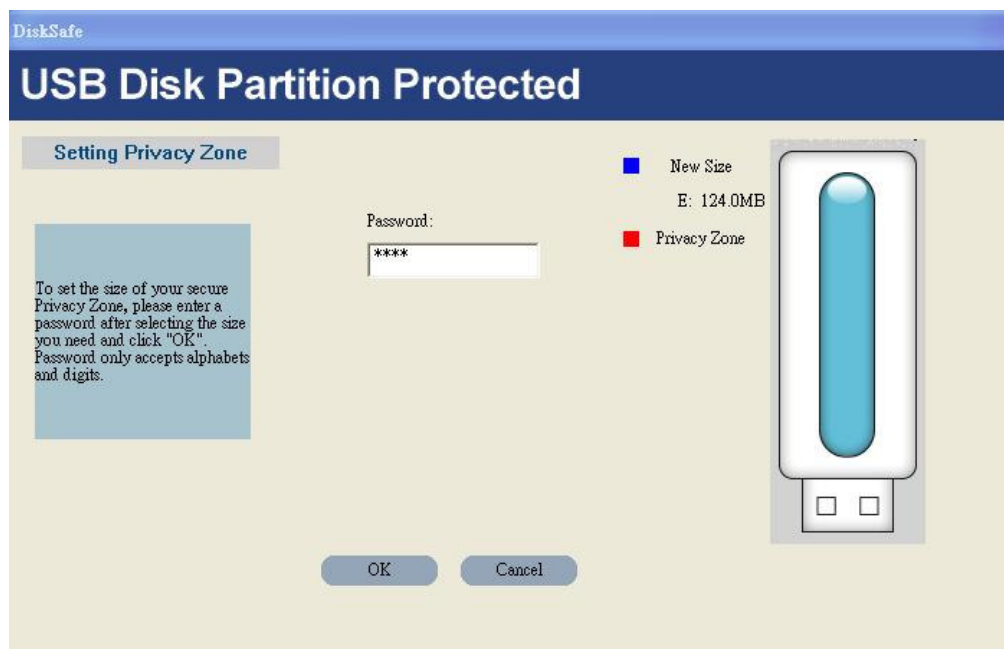

3. Click “OK” to complete the setting.

E. Security Feature

- Allow user to set own password.
- Allow user to enter "Password Hint", in case user forget their password.
- Automatically format the Hi-Speed USB Flash Disk and all data will be destroyed after six incorrect attempts

IMPORTANT

When using Hi-Speed USB Flash Disk with the DiskSafe application program, only **ONE** Hi-Speed USB Flash Disk is allowed at once. **DO NOT PLUG IN TWO OR MORE HI-SPEED USB FLASH DISK AT THE SAME TIME.**

Windows 2000 User

Since Windows 2000 only can support **ONE** removable disk drive. **Please install Windows Service Pack 3 or above version, then you can see two devices** when you are using DiskSafe software to create Hi-Speed USB Flash Disk as public zone & privacy zone.