Procedura aktualizacji firmware w obudowie

Welland ME-747AN-S



Krok 3. Wybierz z menu View	
🚓 - HMPT	
	- 12
waiting connecting to larget	<u> </u>
<u><</u>	2
Ethernet -> Marvell Gigabit Ethernet Controller (Microsoft's Packet Scheduler) MAC_Addr -> [00-00-6A-10-00-5C]	NUM
Krok 4. Wyłącz Barcode	
🔠 - HMPT	
R - HMPT File View Help	
HMPT File View Help Wai Status Bar Interface	
HMPT File View Help Wai Status Bar Interface Interface Barcode	
HMPT File View Help Wai ↓ Status Bar Interface ↓ Barcode	
File View Help Wai Status Bar ting to Target Interface Interface VBarcode	
File View Help Wai Status Bar tting to Target Interface Variation	
File View Help Wai Status Bar tring to Target Interface Barcode	
File View Help Wai • Status Bar Interface • Barcode	
File View Help Wai • Status Bar Interface • Barcode	
HMPT File View Help Wai Status Bar Interface Very Barcode	
<pre>File View Help Wai Status Bar ting to Target Deterface Barcode</pre>	
<pre> PHMPT File View Help Wai Status Bar Interface Barcode Parcode Physical Phys</pre>	
File View Help Wai Status Bar rting to Target Deterface Barcode	
File View Help Wai • Status Bar thing to Target Interface I Barcode	
Fie View Help Wai Status Bar Dearface Parcode	
File View Help Wai Status Bar rting to Target Deterface Barcode	



Crok 7. Włącz obudowę, aktualizacja firmware zacznie się automatycz	znie.
🚓 - НМРТ	
File View Help	
Waiting connecting to Target	
	5
Liner et -> Marvell Gigabit Ethernet Controller (Microsoft's Packet Scheduler) Liner 8. Czekaj do czasu pojawienia się komunikatu Waiting connecti Oznacza to, że aktualizacja przebiegła prawidłowo.	NUM
Ethernet -> Marvell Gigabit Ethernet Controller (Microsoft's Packet Scheduler) Crok 8. Czekaj do czasu pojawienia się komunikatu Waiting connecti Oznacza to, że aktualizacja przebiegła prawidłowo.	num ng to Target.
Ethernet -> Marvell Gigabit Ethernet Controller (Microsoft's Packet Scheduler) Crok 8. Czekaj do czasu pojawienia się komunikatu Waiting connecti Oznacza to, że aktualizacja przebiegła prawidłowo. HMPT File Yiew Help	ng to Target.
Ethernet -> Marvell Gigabit Ethernet Controller (Microsoft's Packet Scheduler) Crok 8. Czekaj do czasu pojawienia się komunikatu Waiting connecti Oznacza to, że aktualizacja przebiegła prawidłowo. Image: A state of the sta	ng to Target.