IP Speed Dome Hardware Installation Guide

Ver. 070906

Table of Contents

1	INT	RODUCTION	1-1
	1.1	Package Contents	1-1
	1.2	Features and Benefits	1-2
	1.3	Safety precautions	1-3
	1.4	Warning indications for use	1-3
	1.5	Environmental requirements	1-3
	1.6	Precautions on installation	1-4
2	H/W	Installation Procedure	2-6
	2.1	Connections	
	2.1.1		
	2.1.2		
	2.2		
	2.2	Speed dome set up	
	2.2.1		
	2.3	Indoor H/W Installation Procedures	
	2.3.1	Indoor installation	2-10
	2.4	Outdoor H/W Installation Procedures	2-11
	2.4.1	Understand Outdoor applications	2-11
	2.4.2	Install the mount	2-12
	2.4.3	Connect the housing to the mount	2-14
	2.5	Detailed dimensions	2-16
	2.5.1	Outdoor Housing	2-16
	2.5.2	Outdoor Wall mount	2-17
	2.5.3	Outdoor Ceiling mount	2-18
	2.5.4	Outdoor Corner mount	2-19
	2.5.5	Outdoor Pole mount	2-20
3	App	endix	3-21
	3.1	Camera ID Set up	3-21

1 INTRODUCTION

1.1 Package Contents

Indoor





Outdoor

Power Core (for Indoor)



Adapter (for Indoor)



Software CD



Power Box (for Outdoor)



1.2 Features and Benefits

● MPEG-4 compression gives a high resolution image quality
The IP speed dome offers an optimal combination of network, digital, and optical technology. The IP Speed Dome adopts MPEG-4 ASP compliant compression technology which compress video analog into video streaming while maintaining resolution up to full-D1, 30 fps. Building in with LAN/WAN ports, the IP Speed Dome applies QoS (Quality of Service) technology to fully utilize the network bandwidth. Meanwhile, IP Speed Dome also supports multicast video streaming technologies to fulfill almost unlimited on-line video requests.

• Remote control from any place at any time

The IP Speed Dome Series adopts ARM9 SoC base embedded system and web server which enables remote control of the camera. Through bundled AP, you can pan/tilt/zoom the camera, set up motion detection to a specified area, perform tour monitoring, set up different video resolutions, etc. In addition, features such as tour surveillance, alarm and further enhance the usefulness of IP Speed Dome Series to make your remote surveillance more flexible and more responsive to different situations or environments.

• High quality and reliability in both optics and mechanism

With a cleverly designed pan/tilt mechanism and an industrial-grade slip ring, the IP speed dome accurate auto zoom system, and powerful 352X zoom capability.

1.3 Safety precautions

- 1. Select a proper location and use safe hoist for installing speed dome cameras.
- 2. Confirm that the hoist is capable of lifting to the installation position.
- 3. Proper protective measures must be provided in the hoist, for protecting engineering staffs.
- 4. Confirm that power supply is 110V/220V. Ensure safety precautions for preventing electric shock.

1.4 Warning indications for use

- 1. Local electrical appliance regulations must be observed for using this product.
- 2. The outdoor model uses AC24V, while the indoor model uses DC15V. For safety of use, do not use any power supply other than that specified.
- 3. For the safety of the engineering staffs, apply power only upon completion of installation.

1.5 Environmental requirements

- 1. Environmental requirements for indoor type speed dome cameras:
 - Environment temperature: -10°C to +40°C
 - Environment humidity: <90%
 - Power supply: DC15V, 2A, 50/60Hz
- 2. Environmental requirements for outdoor type speed dome cameras:
 - Environment temperature: -40°C to +50°C
 - Environment humidity: <90%
 - Power supply: AC24V, 2A, 50/60Hz

1.6 Precautions on installation

1. Basic requirements for installation

- Follow local regulations about installation safety request.
- Check out if accessories are complete. Optional accessories are required for different installation sites. Please contact your local distributors for proper installation accessories, so that the camera could be installed safely without causing danger.
- 2. Check if the installation location is of sufficient height.
- 3. Check if the installation location is strong enough for supporting cameras. Make sure installation spots (ceiling or wall) is of sufficient strength to support the camera and bracket without immediate danger of falling.

4. Setting of Camera Position Code

Setup your camera ID address and communication protocol prior to installation. In order to make a new setting valid, please shut down the power before re-setting.

5. Self Test of Camera

The camera is available with the following self test. Carry them out prior to installation. After connecting power, speed dome camera will turn 90 degrees down vertically, then start horizontal scanning. This will last for 20-30 seconds. Speed dome camera will then stop at the Preset Position 1. On completion of these, the speed dome camera is in normal condition.

6. Please keep the original packaging

After unpacking the camera, take good care of the original packaging. In case any problem occurred, it can be used to re-pack cameras for returning to the local distributor or manufacturer for repair.

7. Remove protection materials before supplying power to the camera, so as to prevent it from faulty operation or causing mechanical errors. See the following illustration.



- 8. This product is normally installed in an elevated position.
 Installation work should comply with local safe regulations.
- 9. Proper safety precautions and protective measures shall be taken for installing the camera.
- 10. For the personnel safety sake, carry out electrification and product test only after completion of installation work.

2

H/W Installation Procedure

2.1 Connections

Indoor IP speed dome connection is different from the outdoor IP speed dome. Follow the description below to connect to respective apparatus.

2.1.1 Indoor connections



1. Video-out cable

Connect it to the video-in port of respective apparatus. The signal is 75Ω Composite Video Signal.


2. DC wire cable

Connect this DC wire cable to the board on power box for 15V DC,2.0A voltage input.

3. LAN/WAN cable

This cable is used for LAN/WAN via a standard RJ45 connector. Supporting NWAY, this video server can auto detect the speed of local network segment (10Base-T/100Base-TX Ethernet). WAN is for FTTH and connects to a xDSL or cable modem.

2.1.2 Outdoor connections

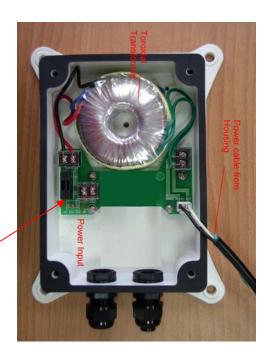

Power Input -Wire Connection needed

1. Power input

Connect this jack to the power supply of 110VAC or 230VAC according to the product you bought.

2. RJ45 Cable Connection

Connect the RJ45 port from housing cable to another RJ45 network cable for LAN/WAN inside the power box.

3. Video-Out Cable Connection

Connect the Video-Out cable from housing to another BNC cable for video image inside the power box.

4. Housing Power Cable Connection

Connect the power cable from housing to the board inside of the power box

*Notice

Before having RJ45 cable connected to the RJ45 port, one must first have both RJ45 cables through the cable glands inside the power box without the cable connector and RJ45 port connector first, and then you make the connector from there. (Because the RJ45 with connector or the port connector can't fit through to the cable glands) Please tighten the glands firmly by hand first and after that use tool to tighen the knot for another 1/2 turn. Do not over-tighten the glands for long life span purpose

2.2 Speed dome set up


Follow the description below setup IP speed dome's hardware camera ID, baud rate and protocol.

Speed dome setup	Video platform setup	AP (NVR2) setup
Camera ID, baud rate and	protocol setting in these 3	item should be the same

Camera ID, baud rate and protocol setting in these 3 item should be the same for PTZ control function to work.

2.2.1 Setup camera ID, baud rate and protocol

Loosen the four screws and de-attached the dome cover from the housing. Follow the tables below to setup each respective parameter. A 10-position DIP SWITCH is furnished on the camera control board. SW1~ SW8 are for ID address setting and SW9/SW10 are for protocol setting. Respective setting is illustrated in the following table:

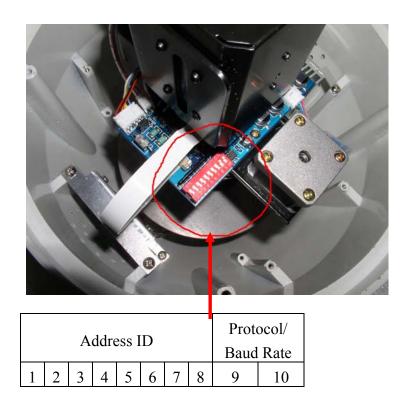

Setting of camera ID Address and Communication Protocol

• Protocol and baud rate switch

	SW9	SW10
PELCO D-2400	OFF	OFF
PELCO P-4800	ON	OFF
PELCO P-9600	OFF	ON
EYEVIEW	ON	ON
(Recommended)		

• Camera ID address setting

Please refer to the Appendix. A "Camera hardware ID setup"

2.3 Indoor H/W Installation Procedures

2.3.1 Indoor installation


1. Installing the camera:

Take out the camera upper casing, as shown below:

Wall mount



Pandent mount

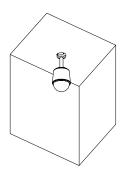

2. Wiring

After completion of the above works, connect the wires for video / DC15 V Power Input/ LAN/WAN.

3. Electrification test

- Before connecting the power, make a final check to confirm correct wiring.
- After electrification, the camera will undertake an automatic self-test. This routine consists of vertical scanning following by horizontal scanning. Then the camera automatically swings to Position 1. This concludes the initialization of self-test.

4. Install the dome cover

Finishing all the above, the transparent dome cover can be installed. Make sure the screws are driven tightly.

2.4 Outdoor H/W Installation Procedures


There are 4 kinds of outdoor application. And each of them requires two steps to install the outdoor IP speed dome. Please refer to the picture below to understand each application type.

Then follow the procedure below to install it.

2.4.1 Understand Outdoor applications

• Outdoor Wall mount


Outdoor Housing + outdoor Wall mount

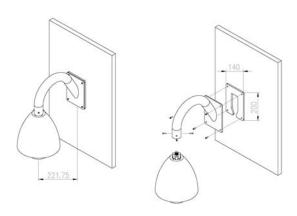

• Outdoor Ceiling mount


Outdoor Housing + outdoor Ceiling mount



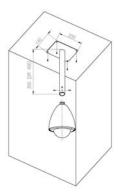


Outdoor Corner mount

Outdoor Housing + outdoor Wall mount + outdoor Corner bracket

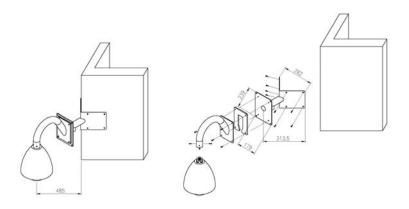

• Outdoor Pole mount

Outdoor Housing + outdoor Wall mount + outdoor Pole bracket

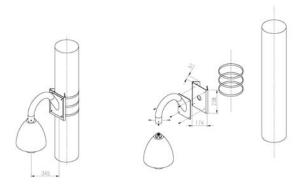


2.4.2 Install the mount

The mounting wall must be strong enough for holding the camera. Minimum loading capacity should be at least 35 kg or above, for prevention of fall and personal injury.

• Mark the 4 mounting hole centers according to the mount base plate, as

shown below:

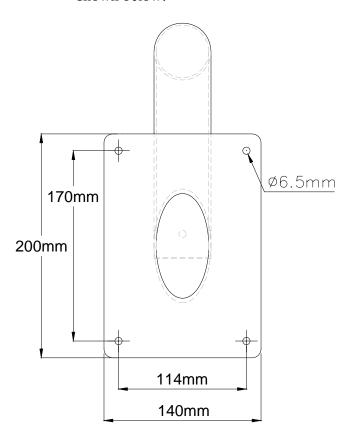

- Drill 4 holes Ø 6.5mm:
- Use the 4 screws provided to fix the mount on the wall

2.4.3 Connect the housing to the mount

• Insert the cable from the housing through the hole. There's some lubricating oil inside the tube, thus the cable would have some oil on it once inserted through the Tube.




• Then take out M6 screws and hexagonal wrench provided within the package and fasten the 4 screws as pictue below.




- Connect the housing cable to the board in the junction box
- Connect the junction box to respective apparatus. Please refer to Page 2-17 for how to connect.

2.5 Detailed dimensions


2.5.1 Outdoor Housing

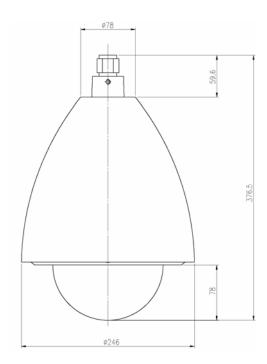


2.5.2 Outdoor Wall mount

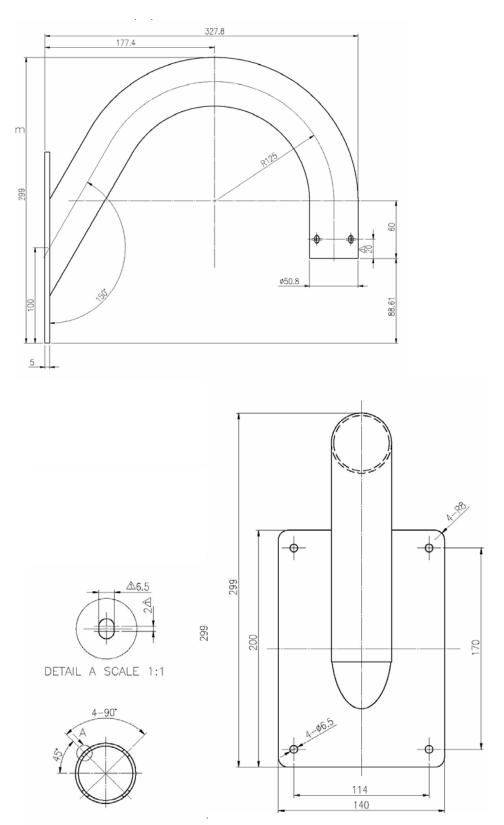


2.5.3 Outdoor Ceiling mount

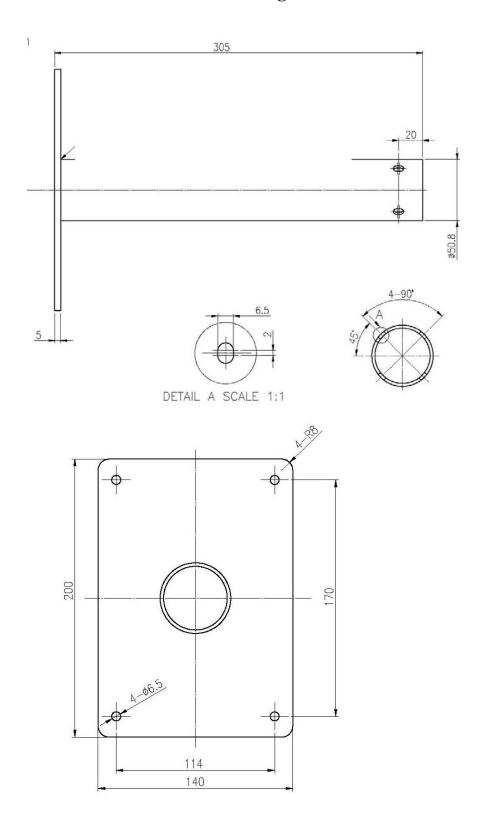

2.5.4 Outdoor Corner mount

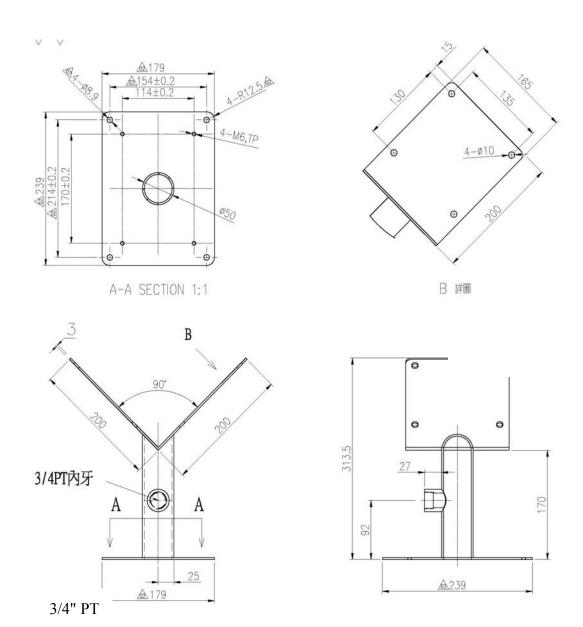

2.5.5 Outdoor Pole mount

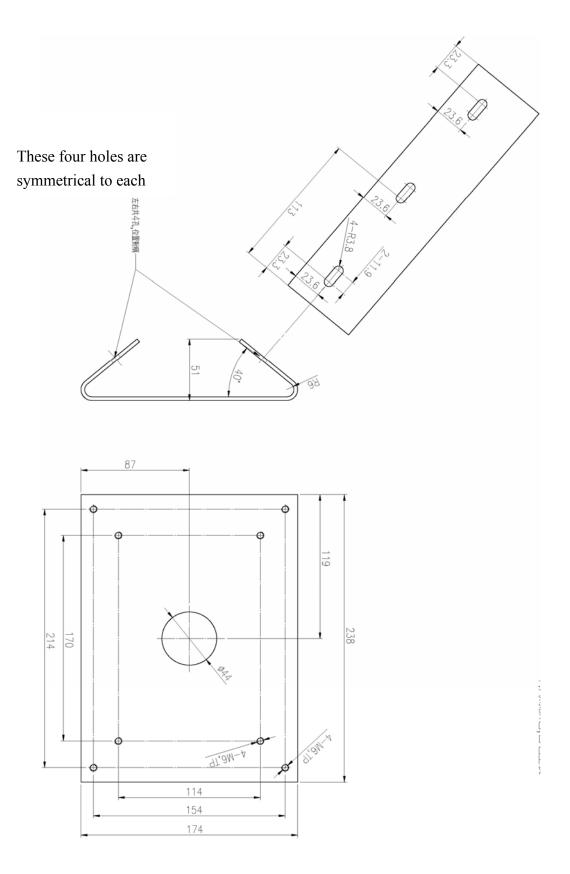

3 Appendix

3.1 Camera ID Sep up

Symbol "o" in the following tables denote setting "ON"

	1	2	3	4	5	6	7	8
1	\bigcirc							
2		0						
3	\bigcirc	\bigcirc						
4			\bigcirc					
5	\bigcirc		\bigcirc					
1 2 3 4 5 6 7		0	0 0 0					
7	\bigcirc	\bigcirc	\bigcirc					
8				\bigcirc				
9	\bigcirc			000000				
10		0		\bigcirc				
11	\bigcirc	\bigcirc		\bigcirc				
12			\bigcirc	\bigcirc				
13	\bigcirc		\bigcirc	\bigcirc				
14		0	0 0 0	\bigcirc				
15	\bigcirc	\bigcirc	\bigcirc	\bigcirc				
16					\bigcirc			
17	\bigcirc				\bigcirc			
18		\bigcirc			\bigcirc			
19	\bigcirc	\bigcirc			\bigcirc			
20			\bigcirc		\bigcirc			
21	\bigcirc		\bigcirc		\bigcirc			
11 12 13 14 15 16 17 18 19 20 21 22 23 24 25		\bigcirc	0 0		000000000			
23	\bigcirc	\bigcirc	0		\bigcirc			
24				0	\bigcirc			
25	\bigcirc			\bigcirc				

	1	2	3	4	5	6	7	8
26		2						
27		\bigcirc						
27 28			\bigcirc	4 0 0 0 0	5 ○ ○ ○ ○			
29	\bigcirc		0000	\bigcirc	\bigcirc			
30		0	\bigcirc	\bigcirc				
31	\bigcirc	\bigcirc	\bigcirc	\bigcirc				
32						\bigcirc		
32 33 34 35	\bigcirc					\bigcirc		
34		0				\bigcirc		
35	\bigcirc	\bigcirc				\bigcirc		
36						\bigcirc		
37	\bigcirc		\bigcirc			\bigcirc		
38		0	\bigcirc			\bigcirc		
39	0	\bigcirc	\bigcirc			\bigcirc		
40				\bigcirc		\bigcirc		
41	\bigcirc					\bigcirc		
42		0				\bigcirc		
39 40 41 42 43 44 45 46	\bigcirc	\bigcirc		\bigcirc		\bigcirc		
44			\bigcirc	\bigcirc		\bigcirc		
45	\bigcirc		\bigcirc	\bigcirc		\bigcirc		
46		0	0000			0		
47	\bigcirc	\bigcirc	\bigcirc	\bigcirc		\bigcirc		
48					0	\bigcirc		
48	\bigcirc				0	000000000000000000000000000000000000000		
50								

	1	2	3	4	5	6	7	8
51		\bigcirc						
52								
	0		0 0					
54		\bigcirc	0		\bigcirc	\bigcirc		
535455	0	\bigcirc	\bigcirc		0	\bigcirc		
56				0	0	0		
57	0			\bigcirc	5 0 0 0 0	0		
58		\bigcirc		\bigcirc	0	0		
59	0	\bigcirc		\bigcirc	0	0		
60				0 0 0 0				
			0		0			
61 62 63 64		\bigcirc			\bigcirc			
63								
64							0	
65	0						\bigcirc	
66		\bigcirc						
67	0	\bigcirc						
68			0					
69	0		0					
70		\bigcirc	\bigcirc					
69 70 71 72	0	0	0				0000000000	
72				0			0	
73	0			0				
74		0		0				
75								

	1	2	3	4	5	6	7	8
76			\bigcirc				7 ○ ○	
77			\bigcirc					
78		00		4 ○ ○ ○			\bigcirc	
79		\bigcirc	\bigcirc	\bigcirc				
80					\bigcirc			
81	\bigcirc				\bigcirc		\bigcirc	
82		\bigcirc			\bigcirc		\bigcirc	
83	0	0						
84			\bigcirc		\bigcirc		\bigcirc	
85	\bigcirc		0		\bigcirc		\bigcirc	
86		0	\bigcirc		\bigcirc		\bigcirc	
87	0	\bigcirc	\bigcirc		\bigcirc		\bigcirc	
88					\bigcirc			
89	\bigcirc			\bigcirc	\bigcirc		\bigcirc	
90		\bigcirc		0	\bigcirc			
91	\bigcirc	\bigcirc		\bigcirc	\bigcirc			
92			\bigcirc	0	\bigcirc			
93	\bigcirc		\bigcirc	0	\bigcirc			
93 94		\bigcirc	0		\bigcirc			
95	\bigcirc	0	\bigcirc	0	\bigcirc			
96						0	000000000000000000000000000000000000000	
97	0					\bigcirc		
98		0				0	\bigcirc	
99	0	0				0	0	
100			\bigcirc			\bigcirc	\bigcirc	

	1	2	3	4	5	6	7	8
101	\bigcirc		\bigcirc			\bigcirc	\bigcirc	
102		\bigcirc	\bigcirc			\bigcirc	\bigcirc	
103	\bigcirc	\bigcirc	\bigcirc			\bigcirc	0	
104				0		00	00000000000	
105	0					\bigcirc	\bigcirc	
106		0		0		0	\bigcirc	
107	0	0		0		\bigcirc	\bigcirc	
108			0	0			\bigcirc	
109	\bigcirc		0	0			\bigcirc	
110		0	0	0			\bigcirc	
111	0	0	0	0		\bigcirc	\bigcirc	
112					0	\bigcirc	\bigcirc	
113	\bigcirc				\bigcirc	\bigcirc	\bigcirc	
114		0			0 0 0	\bigcirc	\bigcirc	
115	\bigcirc	\bigcirc			\bigcirc	\bigcirc		
116			0		\bigcirc	\bigcirc	\bigcirc	
117	\bigcirc		0		\bigcirc	\bigcirc	0	
118		0	0		0	\bigcirc		
119	\bigcirc	0	0		\bigcirc	\bigcirc		
120				0	\bigcirc	\bigcirc	\bigcirc	
121	0			0	0	00	0	
122		0		0	0	0		
123	0	0		0 0	0	0	0	
124			0	\cup	0	\bigcirc	\bigcirc	
125	\bigcirc		\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	

	4	2	2	1	5	6	7	8
100	1	2	3	4	5	6	7	0
126	_	<u> </u>	<u> </u>	0	<u> </u>	<u> </u>	<u> </u>	
127	\bigcirc	\bigcirc	0	0	0	0	\bigcirc	
128								
129	\bigcirc							\bigcirc
130		\bigcirc						
131	\bigcirc	\bigcirc						
132			\bigcirc					
133	\bigcirc		\bigcirc					
134		\bigcirc	0					
135	\bigcirc	\bigcirc	\bigcirc					
136				\bigcirc				
137	\bigcirc			\bigcirc				
138		\bigcirc		0				\bigcirc
139	\bigcirc	\bigcirc						
140			\bigcirc	\bigcirc				
141	\bigcirc		0	0				\bigcirc
142		\bigcirc	\bigcirc	\bigcirc				
143	\bigcirc	\bigcirc	\bigcirc	0				\bigcirc
144								
145	\bigcirc				\bigcirc			\bigcirc
146		\bigcirc			\bigcirc			\bigcirc
147	\bigcirc	\bigcirc			\bigcirc			\bigcirc
148			0		\bigcirc			\bigcirc
149	\bigcirc		0					
150		\bigcirc	\bigcirc		\bigcirc			\bigcirc

	1	2	3	4	5	6	7	8
151	0	\bigcirc	0		0			\bigcirc
152				\bigcirc	\bigcirc			
153	\bigcirc			00000	0000000			
154		0		\bigcirc	\bigcirc			\bigcirc
155	0	\bigcirc		\bigcirc	0			\bigcirc
156			0	\bigcirc	0			\bigcirc
157	\bigcirc		0	\bigcirc	\bigcirc			\bigcirc
158		0			\bigcirc			\bigcirc
159	0	0	0	\bigcirc	0			\bigcirc
160						\bigcirc		\bigcirc
161	\bigcirc					\bigcirc		\bigcirc
162		0				\bigcirc		\bigcirc
163	\bigcirc	\bigcirc				\bigcirc		\bigcirc
164			\bigcirc			\bigcirc		\bigcirc
165	0		0			\bigcirc		0
166		0	\bigcirc			\bigcirc		\bigcirc
167	0	0	0			\bigcirc		0
168				0		\bigcirc		0
169	0			0		\bigcirc		0
170		0		0		\bigcirc		0
171	0	0		0		\bigcirc		0
172			0	00000		0000000000000000		000000000000000000000000000000000000000
173	0		0	0		0		0
174		0	0	0		0		0
175			0	0				

	1	2	3	4	5	6	7	8
176					0	\bigcirc		\bigcirc
177	0				0	0		\bigcirc
178		0			0	0		\bigcirc
179	\bigcirc	\bigcirc			\bigcirc	\bigcirc		\bigcirc
180			0		\bigcirc	0		\bigcirc
181	\bigcirc		0		0 0 0	0 0 0		\bigcirc
182		0	0		\bigcirc			\bigcirc
183	\bigcirc	0	0		0	0		\bigcirc
184				\bigcirc	\bigcirc	\bigcirc		\bigcirc
185	\bigcirc			\bigcirc	\bigcirc	\bigcirc		\bigcirc
186		0		0	0	\bigcirc		\bigcirc
187	\bigcirc	\bigcirc		\bigcirc		Ŏ		\bigcirc
188			0	0	\bigcirc			\bigcirc
189	\bigcirc		0	\bigcirc	\bigcirc	0		\bigcirc
190		\bigcirc	0	0	\bigcirc	\bigcirc		\bigcirc
191	0	0	\bigcirc	\bigcirc	0	0		\bigcirc
192							0	\bigcirc
193	0						0	\bigcirc
194		0					0	\bigcirc
195	0	0					0	\bigcirc
196			0				0	\bigcirc
197	0		0					000000000000000000000000000000000000000
198		0	0				0	\bigcirc
199	0	0	0					\bigcirc
200							\bigcirc	\bigcirc

	1	2	3	4	5	6	7	8		1	2	3	4	5	6	7	8
201	\bigcirc			\bigcirc			\bigcirc	\bigcirc	226		\bigcirc				\bigcirc	\bigcirc	
202				\bigcirc				\bigcirc	227	\bigcirc	\bigcirc				\bigcirc	\bigcirc	
203	\bigcirc			\bigcirc				\bigcirc	228			\bigcirc			\bigcirc	\bigcirc	
204				\bigcirc				\bigcirc	229			\bigcirc				\bigcirc	
205	\bigcirc			\bigcirc				\bigcirc	230		\bigcirc	\bigcirc			\bigcirc	\bigcirc	
206				\bigcirc				\bigcirc	231		\bigcirc	\bigcirc				\bigcirc	
207	\bigcirc	0	0	\bigcirc			0	\bigcirc	232				\bigcirc		\bigcirc	\bigcirc	
208								\bigcirc	233	\bigcirc			\bigcirc		\bigcirc	\bigcirc	
209	\bigcirc						\bigcirc	\bigcirc	234		\bigcirc		\bigcirc		\bigcirc	\bigcirc	
210		\bigcirc			\bigcirc		\bigcirc	\bigcirc	235	\bigcirc	\bigcirc		\bigcirc		\bigcirc	\bigcirc	
211	\bigcirc							\bigcirc	236			\bigcirc	\bigcirc		\bigcirc	\bigcirc	
212			\bigcirc				\bigcirc	\bigcirc	237	\bigcirc		\bigcirc	\bigcirc		\bigcirc	\bigcirc	
213	\bigcirc		0		\bigcirc		\bigcirc	\bigcirc	238		\bigcirc	0	\bigcirc		\bigcirc	\bigcirc	
214		\bigcirc	\bigcirc		\bigcirc		\bigcirc	\bigcirc	239	\bigcirc	\bigcirc	\bigcirc	\bigcirc		\bigcirc	\bigcirc	
215	\bigcirc	0	0		0		0	\bigcirc	240					\bigcirc	\bigcirc	0	
216				\bigcirc	0		0	\bigcirc	241	\bigcirc				\bigcirc	\bigcirc	\bigcirc	
217	0			\bigcirc	\bigcirc		0	0	242		\bigcirc			0	0	0	
218		0		\bigcirc	\bigcirc		0	\bigcirc	243	\bigcirc	\bigcirc			0	0	0	
219	0	0		\bigcirc	0		0	0	244			0		0	0	0	
220			0	\bigcirc	0		0	0	245	\bigcirc		0		\bigcirc	\bigcirc	0	
221	0		0	\bigcirc	0		0	0	246		\bigcirc	0		0	0	0	
222		0	0	0	0		0	0	247	0	0	0		0	0	0	
223	0	0	0	0	0		0	0	248				0	0	0	0	
224						\bigcirc	0	0	249	0			0	0	0	0	
225						\bigcirc		\bigcirc	250		\bigcirc		\bigcirc				

	1	2	3	4	5	6	7	8
226		2				\bigcirc	\bigcirc	\bigcirc
227	0	\bigcirc				0	0	\bigcirc
228			0			\bigcirc	\bigcirc	\bigcirc
229	0		0			\bigcirc	\bigcirc	\bigcirc
230		\bigcirc				\bigcirc	\bigcirc	\bigcirc
231	0	\bigcirc	0			0	\bigcirc	
232				\bigcirc		0	0	\bigcirc
233	\bigcirc			\bigcirc		\bigcirc	\bigcirc	\bigcirc
234		\bigcirc		0 0 0				\bigcirc
235	\bigcirc	\bigcirc		\bigcirc		0	\bigcirc	\bigcirc
236			0	\bigcirc		0	0	0
237	0		0	0		0	0	0 0
238		\bigcirc	0	\bigcirc			0	\bigcirc
239	0	\bigcirc	0	\bigcirc		0	0	0
240					\bigcirc	\bigcirc	\bigcirc	\bigcirc
241	0				0			0
242		\bigcirc			\bigcirc	0	0	\bigcirc
243	\bigcirc	\bigcirc			\bigcirc	\bigcirc	\bigcirc	
244			0		\bigcirc	0	0	0
245	0		0		\bigcirc	0	0	\bigcirc
246		\bigcirc	0		\bigcirc	0	0	0
247 248	0	\bigcirc	0		0	0	0	\bigcirc
248				0		0		0
249	0			0	0	0	0	\bigcirc
250		\bigcirc			\bigcirc	\bigcirc	\bigcirc	