How to install in Windows® 98

Please follow the steps outlined below for first time installation of the USB Omni floppy disk drive. After a successful installation, you can re-connect the USB floppy disk drive and the system should automatically recognize the attached floppy device.

Install steps:

1. Turn on the computer and enter into Windows® 98.
2. The system will automatically detect the new hardware. A window shown on below will pop up:

3. Once the **[Add New Hardware Wizard].** Window appears, Select **[Search for the best driver for your device],** click **[Next]**.
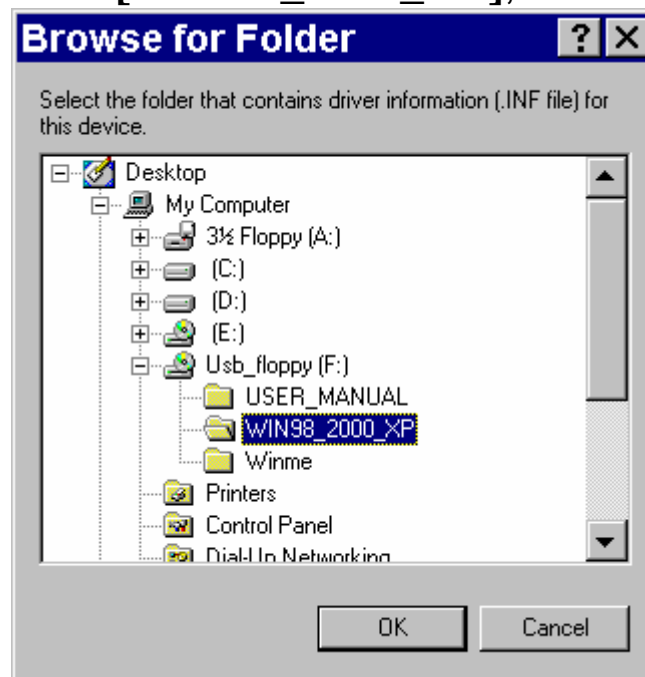

4. Insert the installation CD into the CD-ROM and click **[Next]**. Select **[Specify a location:]** and click **[Browse]**.

5. Select **[Cancel]**.

Browse for Folder

❌ A:\ is not accessible.

The device is not ready.

| Retry | Cancel |

6. Select the driver disk **[WIN98_2000_XP]**, and click [OK]

Browse for Folder

Select the folder that contains driver information (.INF file) for this device.

- Desktop
  - My Computer
    - 3½ Floppy (A:)
    - (C:)
    - (D:)
    - (E:)
    - Usb_floppy (F:)
      - USER_MANUAL
      - WIN98_2000_XP
      - Winme
    - Printers
    - Control Panel
    - Dial-Up Networking

| OK | Cancel |

7. Check the path as follows and click **[Next]**.

Add New Hardware Wizard

Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search.

☐ Floppy disk drives

☐ CD-ROM drive

☐ Microsoft Windows Update

☑ Specify a location:

F:\WIN98_2000_XP

Browse...

< Back   Next >   Cancel

8. Click **[Next]**.

Add New Hardware Wizard

Windows driver file search for the device:

Candy Technology USB Floppy

Windows is now ready to install the best driver for this device. Click Back to select a different driver, or click Next to continue.

Location of driver:

F:\WIN98_~7\PUSBFDSM.INF

< Back   Next >   Cancel

9. Click **[Finish]** and installation process complete.

> ## Add New Hardware Wizard
>
> Candy Technology USB Floppy
>
> Windows has finished installing the software that your new hardware device requires.
>
> < Back | Finish | Cancel

10. You can check the driver in **[System]** under **[Control Panel]**. The driver **[Candy Technology USB Floppy]** icon is shown below:

> ## System Properties
>
> General | Device Manager | Hardware Profiles | Performance
>
> ⊙ View devices by type   ○ View devices by connection
>
> - ⊞ 🖴 Hard disk controllers
> - ⊞ 🎮 Keyboard
> - ⊞ 🖵 Monitors
> - ⊞ 🖧 Network adapters
> - ⊞ ❓ Other devices
> - ⊞ 🔌 Ports (COM & LPT)
> - ⊞ ⬦ SCSI controllers
> - ⊞ 🎛 Sound, video and game controllers
> - ⊞ 🖳 System devices
> - ⊟ 🔌 Universal Serial Bus controllers
>   - 🔌 Candy Technology USB Floppy
>   - 🔌 USB Root Hub
>
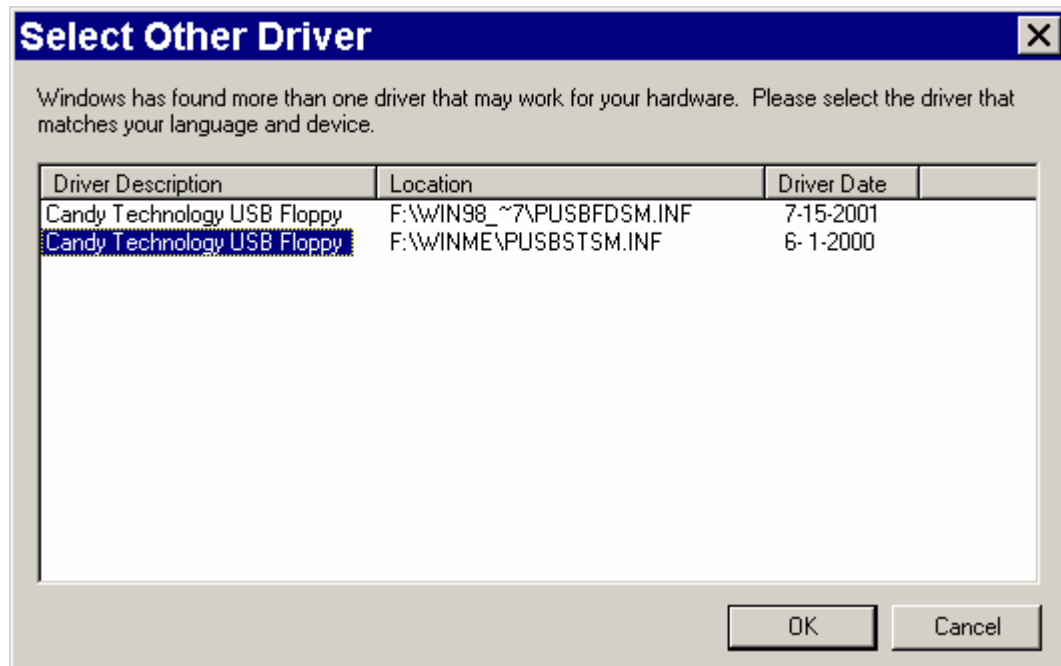> Properties | Refresh | Remove | Print...
>
> OK | Cancel

How to install in Windows® ME

1. Turn on the computer and enter into Windows® ME.
2. The system will automatically detect the new hardware. A window shown below will pop up:
3. Once the **[Add New Hardware Wizard]** window appears. Put the driver disk into your CD-ROM DRIVE, then Select **[Automatic search for a better driver]**, and click **[Next]**.
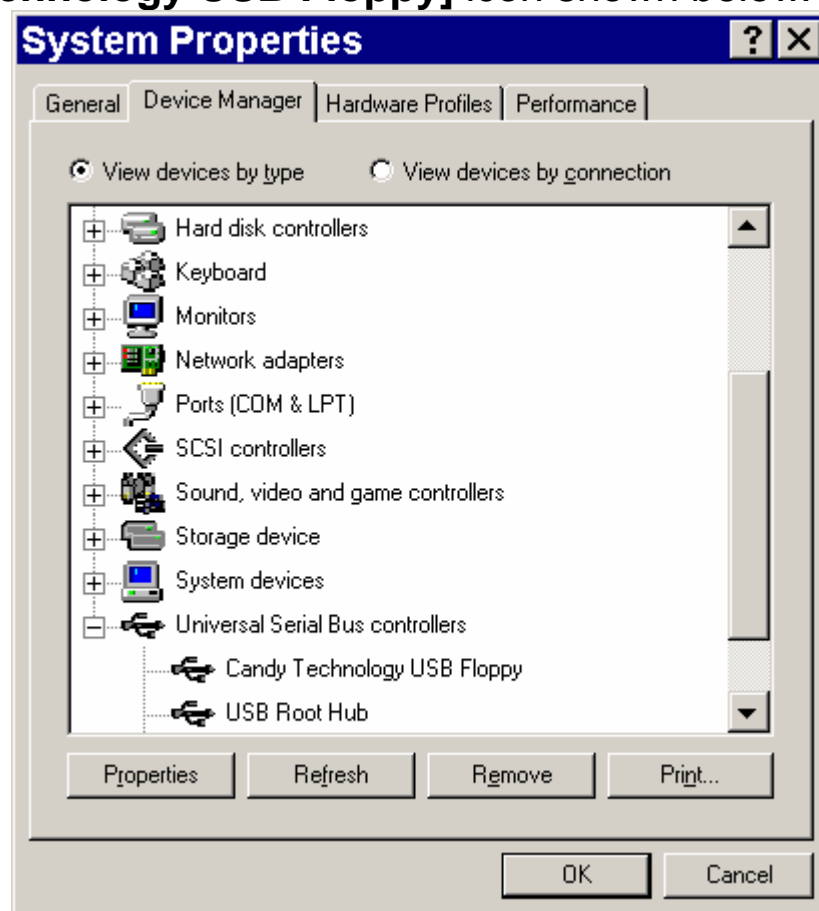
4. Select the driver file **[F:\WINME\PUSBSTSM.INF]**, and click **[Next]**. The letter F: will be substituted for the actual drive letter of your computer CD-ROM DRIVE.

Select Other Driver

Windows has found more than one driver that may work for your hardware. Please select the driver that matches your language and device.

Driver Description	Location	Driver Date
Candy Technology USB Floppy	F:\WIN98_~7\PUSBFDSM.INF	7-15-2001
Candy Technology USB Floppy	F:\WINME\PUSBSTSM.INF	6- 1-2000

OK   Cancel

5. Click **[Finish]** and the installation process is complete.

Add New Hardware Wizard

Candy Technology USB Floppy

Windows has finished installing the software you selected that your new hardware device requires.

< Back   Finish   Cancel

6. You can check the driver in **[System]** under **[Control Panel].** The **[Candy Technology USB Floppy]** icon shown below.

System Properties

General | Device Manager | Hardware Profiles | Performance

○ View devices by type   ○ View devices by connection

- ⊞ Hard disk controllers
- ⊞ Keyboard
- ⊞ Monitors
- ⊞ Network adapters
- ⊞ Ports (COM & LPT)
- ⊞ SCSI controllers
- ⊞ Sound, video and game controllers
- ⊞ Storage device
- ⊞ System devices
- ⊟ Universal Serial Bus controllers
  - Candy Technology USB Floppy
  - USB Root Hub

| Properties | Refresh | Remove | Print... |

| OK | Cancel |

How to install in Windows® 2000

1. Turn on the computer and enter into Windows® 2000.
2. The system will automatically detect the new hardware. A window shown on below will pop up:

Found New Hardware

Candy Technology USB Floppy

Installing ...

3. click **[Next]**.

Found New Hardware Wizard

Welcome to the Found New Hardware Wizard

This wizard helps you install a device driver for a hardware device.

To continue, click Next.

< Back   Next >   Cancel

4. Select **[Search for a suitable driver for my device],** then click **[Next]**.

Found New Hardware Wizard

Install Hardware Device Drivers
A device driver is a software program that enables a hardware device to work with an operating system.

This wizard will complete the installation for this device:

Candy Technology USB Floppy

A device driver is a software program that makes a hardware device work. Windows needs driver files for your new device. To locate driver files and complete the installation click Next.

What do you want the wizard to do?

⦿ Search for a suitable driver for my device (recommended)

◯ Display a list of the known drivers for this device so that I can choose a specific driver

[< Back] [Next >] [Cancel]

5. Select **[Specify a location]**, then click **[Next]**.

Found New Hardware Wizard

Locate Driver Files
Where do you want Windows to search for driver files?

Search for driver files for the following hardware device:

Candy Technology USB Floppy

The wizard searches for suitable drivers in its driver database on your computer and in any of the following optional search locations that you specify.

To start the search, click Next. If you are searching on a floppy disk or CD-ROM drive, insert the floppy disk or CD before clicking Next.

Optional search locations:
☐ Floppy disk drives
☐ CD-ROM drives
☑ Specify a location
☐ Microsoft Windows Update

[< Back] [Next >] [Cancel]

10

6. Put the driver disk into your CD-ROM, then click **[Browse]**

Found New Hardware Wizard

Insert the manufacturer's installation disk into the drive selected, and then click OK.

OK

Cancel

Copy manufacturer's files from:

F:\

Browse...

Type in the actual drive letter of your CD-ROM DRIVE.

7. Click on **[WIN98_2000_XP]** then click **[Open]**.

Locate File

Look in: USB_FLOPPY (E:)

History

USER_MANUAL
WIN98_2000_XP ◄——
WINME

Desktop

My Documents

My Computer

My Network P...

File name: PUSBFDSM.INF

Open

Files of type: Setup Information (*.inf)

Cancel
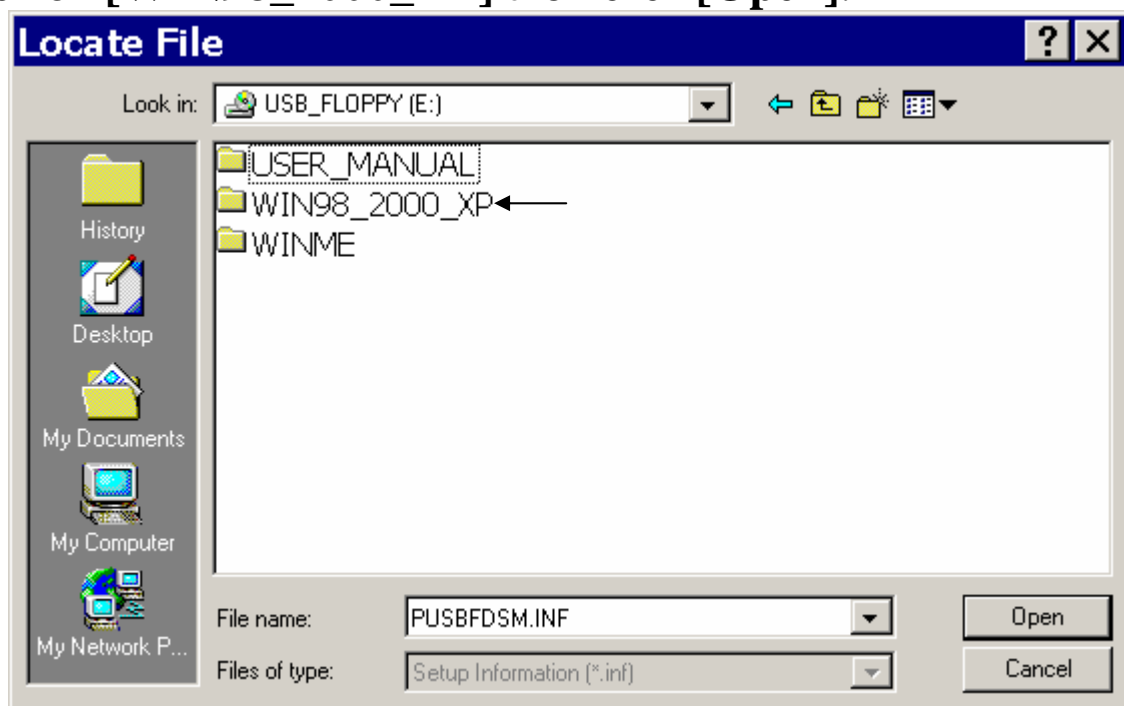
8. Check the file as follows **[PUSBFDSM.INF]** then click **[Open]**.

Locate File

Look in: WIN98_2000_XP

PUSBFDSM.INF

History
Desktop
My Documents
My Computer
My Network P...

File name: PUSBFDSM.INF   Open

Files of type: Setup Information (*.inf)   Cancel

9. Click **[OK]**.

Found New Hardware Wizard

Insert the manufacturer's installation disk into the drive selected, and then click OK.

OK

Cancel

Copy manufacturer's files from:

E:\WIN98_2000_XP   Browse...

10. Click [Next].

Found New Hardware Wizard

Driver Files Search Results
The wizard has finished searching for driver files for your hardware device.

The wizard found a driver for the following device:

Candy Technology USB Floppy

Windows found a driver for this device. To install the driver Windows found, click Next.

e:\win98_2000_xp\pusbfdsm.inf

[< Back] [Next >] [Cancel]

11. Click [Finish] and the installation process is complete.

Found New Hardware Wizard

Completing the Found New Hardware Wizard

Candy Technology USB Floppy

Windows has finished installing the software for this device.

To close this wizard, click Finish.

[< Back] [Finish] [Cancel]

12. You can check the driver in **[System]** under **[Control Panel]**. The driver **[Candy Technology USB Floppy]** icon is shown below:

How to install in Windows® XP

1. Turn on the computer and enter into Windows® XP.
2. The system will automatically detect the new hardware. A window shown below will pop up:
3. Select **[Install the software automatically]**, then click **[Next]**.
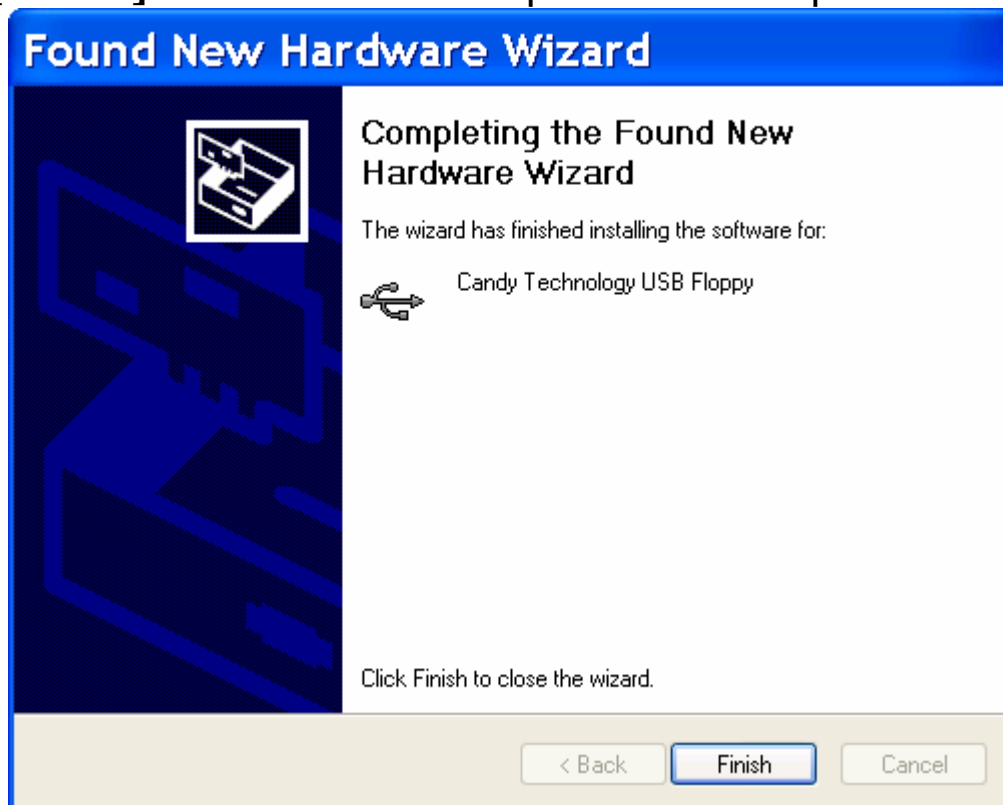
Found New Hardware Wizard

Welcome to the Found New Hardware Wizard

This wizard helps you install software for:

Candy Technology USB Floppy

If your hardware came with an installation CD or floppy disk, insert it now.

What do you want the wizard to do?

● Install the software automatically (Recommended)
○ Install from a list or specific location (Advanced)

Click Next to continue.

[< Back] [Next >] [Cancel]

5. Click **[Finish]** and the installation process is complete.

6. You can check the driver in **[System]** under **[Control Panel]**. The driver **[Candy Technology USB Floppy]** icon is shown below:
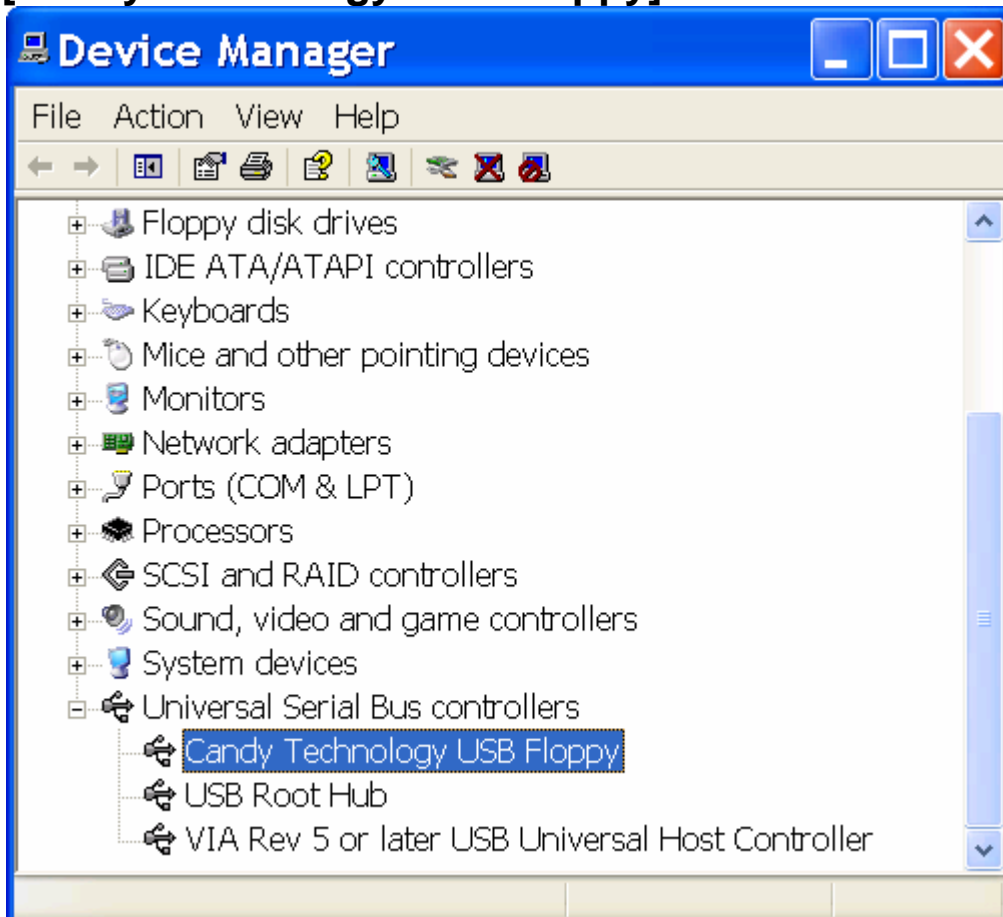
How to unplug the USB cable

1. Double click the icon shown on the right circled in red:
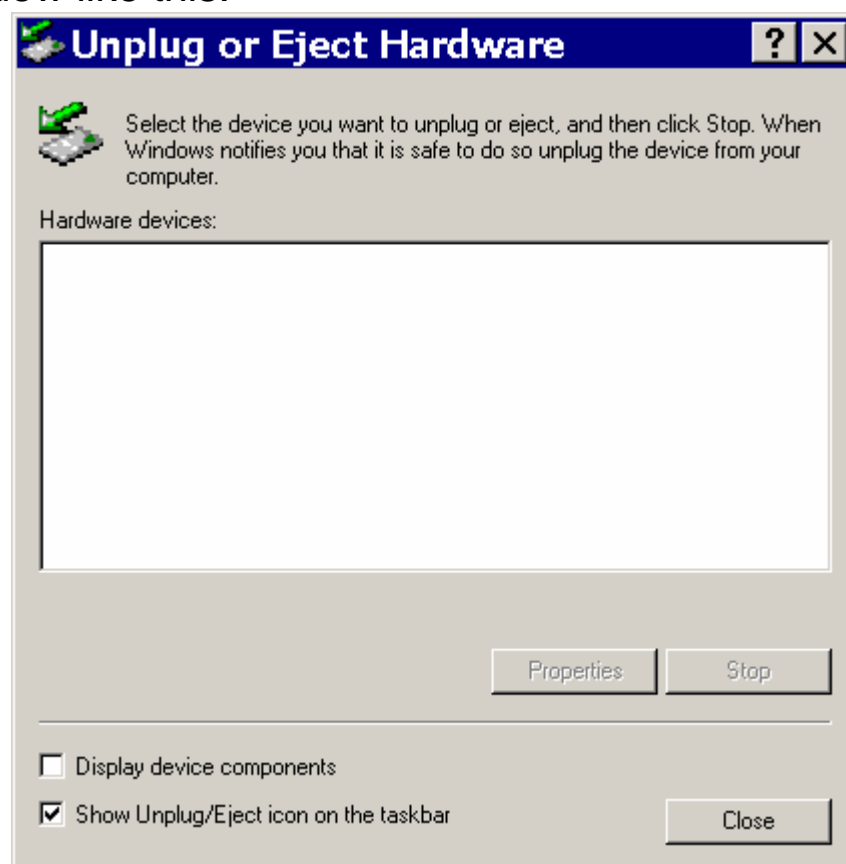

2. Select **[Stop]**.

3. Click **[OK]**.

4. The system will pop up the window similar to below. Press **[OK]**.

Safe To Remove Hardware

The 'Candy Technology USB Floppy' device can now be safely removed from the system.

OK

5. Once the **"Unplug or Eject Hardware"** task is complete, you will see a window like this.

Unplug or Eject Hardware

Select the device you want to unplug or eject, and then click Stop. When Windows notifies you that it is safe to do so unplug the device from your computer.

Hardware devices:

Properties   Stop

☐ Display device components

☑ Show Unplug/Eject icon on the taskbar   Close

6. When you unplug USB cable, the system will show a window with a check-box. Check the box and click **[OK]**.

Unsafe Removal of Device

You have unplugged or ejected a device without stopping it which can cause your computer to crash and lose valuable data.

Please use the hotplug icon in the status bar to safely remove devices before unplugging them.

OK

How to install in iMac PC

Note:
1. If you want to disable the USB Omni Floppy disk drive, please eject the floppy diskette before pulling out the USB cable that is connected to the iMac PC.
2. iMAC OS 8.6 requires a driver to be downloaded from their from their web site, but OS 8.6 later provides a default driver. Follow the below instructions to access the web site.

Software Installation:

1. First, visit //developer.apple.com/hardware/usb/ to download the USB iMAC drivers.
2. After entering the web site, please select **"Download the USB Adapter Card Support (1.3.5)"**
3. When the download is complete, select **"USB Card Support 1.3.5.smi"** which appears on your screen.
4. Follow the instructions to connect the device.