


| | | | |
|---|---|-----|-------------|
| 4 | 3 | 2 | 1 |
| | | REV | DESCRIPTION |
| | | | Section |
| | | | Engineer |
| | | | Checked |
| | | | Date |



| | | | | | | | | |
|---|--|---|--------------------------------------|--|-------------------------------------|---|--|---|
| 前言 | 注意事项 | 产品介绍 | 从Windows系统移除 | 分区与格式化 | 从Mac OS系统移除 | 以下以Win7系统自带分区和格式化 | 大小硬盘分区步骤 | 版权说明 |
| 1. 感谢您购买ORICO产品，为了您能更好地了解本产品的相关信息，请您仔细阅读本手册。本手册包含产品的重要信息，如安全警告、规格、尺寸、重量、保修、售后服务等。本手册包含产品的重要信息，如安全警告、规格、尺寸、重量、保修、售后服务等。本手册包含产品的重要信息，如安全警告、规格、尺寸、重量、保修、售后服务等。 | 1. ORICO 移动硬盘是电子产品，使用时请注意：... 2. 避免在高温、潮湿、阳光直射、强电磁干扰等环境下使用... 3. 避免在高速旋转时进行读写操作... 4. 避免在读写过程中断电或拔出硬盘... | ORICO 3.5寸移动硬盘采用铝合金材质外壳，外观时尚大方，重量仅105g，携带方便。内置3.5寸SATA硬盘，支持USB3.0接口，传输速度快。支持分区和格式化，兼容Windows、Mac OS、Linux等多种操作系统。 | 1. 从Windows系统移除... 2. 从Mac OS系统移除... | 1. 分区与格式化... 2. 分区与格式化... 3. 分区与格式化... | 1. 从Mac OS系统移除... 2. 从Mac OS系统移除... | 1. 以下以Win7系统自带分区和格式化... 2. 以下以Win7系统自带分区和格式化... | 大小硬盘分区步骤... 1. 打开分区助手... 2. 选择要分区的硬盘... 3. 创建分区... 4. 格式化分区... | 版权说明... 1. 本手册版权归ORICO Technologies Co., Ltd. 所有... 2. 本手册中的内容仅供参考，不作为法律依据... |

| | | | | | | | | |
|--|--|--|--|---|---|------------------|--|--|
| Prologue | What is in the box | Installation | Always Remove Devices Safely | Warning | Initialize and Format New Drives under Microsoft Windows | Click "Next" | Assign New Drive Letter for the New Volume | Click "Finish" |
| Thank you so much for Purchase ORICO Product. Please refer to this Manual when using ORICO Product or Experienced Issues. Additionally, Please kindly Contact ORICO Customer Care Team in any Concern. | 5. Please DO NOT Cut, Puncture or Crush This Product. 6. Please Keep this Product from Fire, HEAT, Water, Damp, Oil and Corrosive. | 1. Open the Cover of Product and Insert 3.5 Inch Drive in Right Direction. 2. Attach USB Cable and Power Adapter to the Enclosure and Turn it ON via the ON/OFF Switch. 3. Close the Cover and Attach it to USB Host of your Computer. | Please make sure the computer has finished saving any information to the Drive and stop access it before removing it. Remove drive while it's transferring or saving information may cause failure, Loss of Damage to files and Drive. | In case of fast of data, please operate according to user's manual. Initialize and Format New Drives under Microsoft Windows. TIPS: New Drive need to be Partitioned and Formatted, if your hard disk drive is Partitioned or formatted, you can use it directly. | 2. Any HDD or SSD attached to this Computer will show in "Disk Manager" we opened in Step 2 The Uninitialized Drive is your New Drive which need to be formatted. | 4. Click "Next". | 6. Assign New Drive Letter for the New Volume. Drive Letter such as C, D, E, F will show in Computer and Explorer for Application. | 8. Click "Finish" will start to Format the Volume. |

| | | |
|--|--|--|
| Trouble shooting | Product Introduction | FCC and CE Radiation News |
| Please try the following steps if drive can't be mounted to Computer properly. A. Please check if USB Hosts of Computer working properly with other Device. Additionally, Attach ORICO Device and Drive to Rear USB Hosts is Recommended if you are using a Desktop Computer. B. Please ensure the USB Cable and Power Adapter attached properly. C. Please check if the LED of ORICO Device will on or not when Drive Mounted and Powered On. D. Please ensure the Drive have been Formatted Properly. Right click on computer, Select "Manage", Open "Disk Management" in "Storage" of opened windows will show any Drive mounted to your Computer and if they are Formatted or Not. Please follow the Direction of "Initialize and Format New Drives under Microsoft Windows" if you are mounting New Drives. E. Please Test the ORICO Device and Drive via other USB3.0 or 2.0 Hosts on another Computer if available. F. Please Test the ORICO Device and Drive with other USB3.0 Cable or USB2.0 Cable for Printer etc if available. | Achieved with Unique Tool-Free Design, ORICO 3.5-inch SATA External Hard Drive Enclosure allow to get Internal 3.5-inch Desktop SATA Hard Disk Drive or Solid State Drive Instantly. No Tools & Screws Needed when mount or unmount. | FCC and CE Radiation News... ORICO Technologies Co., Ltd. is committed to providing safe and reliable products to our customers. All our products comply with the FCC and CE standards. For more information, please visit our website or contact our customer support team. |

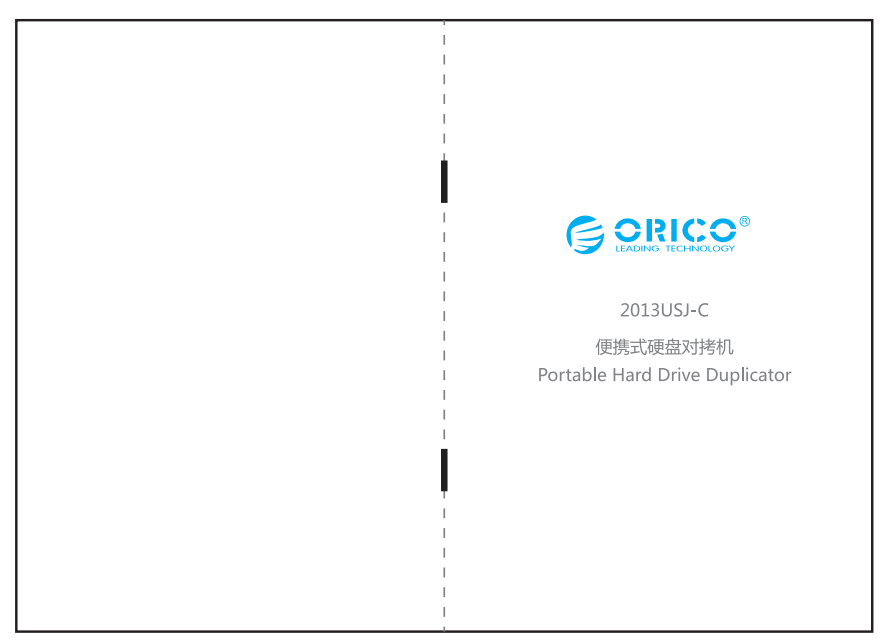

装订方式



灰色文字 K:60
蓝色文字 C:100

- Note:**
1. 材质: 105g铜版纸
 2. 印刷颜色: 2色 双面印刷
 3. 尺寸: 70*100mm
 4. 结合方式: 骑马钉

ORICO Technologies Co.,Ltd

正式圖面

DATE 2017/04/10

| | | |
|----------|------------|--|
| DRAWN | Minna | General tolerance: At least --- Less than |
| DATE | 2015/10/07 | |
| ENGINEER | 魏一丹 | |
| DATE | 2017/04/10 | 0 ~ 10 ± 0.2 |
| CHECKED | | 10 ~ 30 ± 0.5 |
| | | 30 ~ ± 1 |
| DATE | | Sheet-of |
| APPROVAL | | 1/1 |
| DATE | | Unit |
| | | mm |
| | | Size |
| | | A4 |
| | | Scale |
| | | |

ORICO Technologies Co.,Ltd

Part Name 3588US3_说明书V2

File Name ORICO

| | | | |
|---|---|---|---|
| 4 | 3 | 2 | 1 |
|---|---|---|---|